



**Manual Usuario**  
**UPS ESOL TRI PT**  
60 a 200 kVA

# Contents

<b>1. Safety</b> .....	2
<b>1.1 Safety notes</b> .....	2
<b>1.2 Symbols used in this guide</b> .....	2
<b>2. Main Features</b> .....	3
<b>2.1 Summarization</b> .....	3
<b>2.2 Functions and Features</b> .....	3
<b>3. Installation</b> .....	4
<b>3.1 Unpacking and checking</b> .....	4
<b>3.2 Cabinet Outlook</b> .....	5
<b>3.3 LCD control panel</b> .....	10
<b>3.4 Installation notes</b> .....	10
<b>3.5 ExternalProtectiveDevices</b> .....	11
<b>3.6 Power Cables</b> .....	11
<b>3.7 Powercable connect</b> .....	14
<b>3.8 Battery connection</b> .....	18
<b>3.9 UPSparallel Installation</b> .....	19
<b>3.10 LBS installation</b> .....	21
<b>3.11 Computer access</b> .....	22
<b>4. Operation</b> .....	24
<b>4.1 Operation Modes</b> .....	24
<b>4.2 Turn on/off UPS</b> .....	26
<b>4.3 The LCD Display</b> .....	31
<b>4.4 Display Messages/Troubleshooting</b> .....	31
<b>4.5 Options</b> .....	38
<b>Appendix 1 Specifications</b> .....	41
<b>Appendix 2 Problems and Solution</b> .....	42
<b>Appendix 3USB communication portdefinition</b> .....	43
<b>Appendix 4RS232 communication portdefinition</b> .....	44
<b>Appendix 5 RS485 communication port definition</b> .....	45
<b>Appendix 6 Optional port definition</b> .....	46
<b>Appendix 7 REPO instruction</b> .....	47

# 1. Safety

Important safety instructions - Save these instructions

There exists dangerous voltage and high temperature inside the UPS. During the installation, operation and maintenance, please abide the local safety instructions and relative laws, otherwise it will result in personnel injury or equipment damage. Safety instructions in this manual act as a supplementary for the local safety instructions. Our company will not assume the liability that caused by disobeying safety instructions.

## 1.1 Safety notes

1. Even no connection with utility power, 220/230/240VAC voltage may still exist at UPS terminal!
2. For the sake of human being safety, please well earth the UPS before starting it.
3. Don't open or damage battery, for the liquid spilled from the battery is strongly poisonous and do harmful to body!
4. Please avoid short circuit between anode and cathode of battery, otherwise, it will cause spark or fire!
5. Don't disassemble the UPS cover, or there may be an electric shock!
6. Check if there exists high voltage before touching the battery
7. Working environment and storage way will affect the lifetime and reliability of the UPS. Avoid the UPS from working under following environment for long time
  - ◆Area where the humidity and temperature is out of the specified range(temperature 0 to 40°C, relative humidity 5%-95%)
  - ◆Direct sunlight or location nearby heat
  - ◆Vibration Area with possibility to get the UPS crashed.
  - ◆Area with erosive gas, flammable gas, excessive dust, etc
8. Keep ventilations in good conditions otherwise the components inside the UPS will be over-heated which may affect the life of the UPS.

## 1.2 Symbols used in this guide



**WARNING!**

**Risk of electric shock**



**CAUTION!**

**Read this information to avoid equipment damage**

## 2. Main Features

### 2.1 Summarization

This series UPS is a kind of three-in-three-out high frequency online UPS.

The UPS can solve most of the power supply problems, such as blackout, over-voltage, under-voltage, voltage sudden drop, oscillating of decreasing extent, high voltage pulse, voltage fluctuation, surge, inrush current, harmonic distortion (THD), noise interference, frequency fluctuation, etc..

This UPS can be applied to different applications from computer device, automatic equipment, communication system to industry equipment.

### 2.2 Functions and Features

#### ◆Integrated solution for data center

UPS can be integrated with battery cabinet, PDU external maintenance bypass, offering excellent choice for data center.

#### ◆3Phase In/3Phase Out UPS

It is 3Phase In/3Phase Out high-density UPS system, of which input current is kept in balance. No unbalance problem might occur.

#### ◆Digital Control

This series UPS is controlled by Digital Signal Processor(DSP); enhance, it increases reliability, performance, self-protection, and self-diagnostics and so on.

#### ◆Battery Configurable

From 30 blocks to 50 blocks, the battery voltage of this series UPS can be configured at 30 blocks, 32 blocks, 34 blocks, 36 blocks, 38 blocks, 40 blocks, 42 blocks, 44 blocks, 46 blocks, 48 blocks or 50 blocks according to your convenience.

#### ◆Charging Current is configurable

Via setting tool, the user may set the capacity of the batteries as well as reasonable charging current as well as maximum charging current. Constant voltage mode, constant current mode or floating mode can be switched automatically and smoothly.

#### ◆Intelligent Charging Method

The series UPS adopts advanced three-stage charging method—

1<sup>st</sup> stage: high current constant current charging

to guarantee to charge back to 90%;

2<sup>nd</sup>-stage: Constant Voltage

In order to vitalize battery and make sure batteries are fully charged

3<sup>rd</sup> stage: floating mode.

With this 3-stage charging method, it extends the life of the batteries and guarantees fast charging.

#### ◆LCD Display

With LCD plus LED displays, the user may easily get UPS status and its operational parameters, such as input/output voltage, frequency & load%, battery % and ambient temperature, etc...

#### ◆Intelligent Monitoring Function

Via optional SNMP Card, you may remotely control and monitor the UPS.

#### ◆EPO Function

The series UPS may be completely shut off when the EPO is pressed. REPO function(Remote EPO) is also available in this series UPS.

## 3. Installation

### 3.1 Unpacking and checking




**Don't lean the UPS when moving it out from the packaging**

#### Procedure

**Step 1** Use a pallet truck to transport the UPS to the installation position.

**Step 2** Check the UPS packing.

**Step 3** Hold the sliding plate steady. Cut and remove the binding tapes.

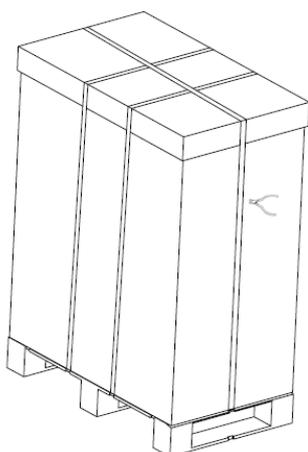


**Step 5** Remove the plastic bag and take out the fittings box.


**Step 6** Check that the UPS is intact.

1. Visually inspect the UPS appearance for shipping damage. If it is damaged, notify the carrier immediately.
2. Check the accessories according to the packing list and contact the dealer in case of missing parts.

**Step 7** Remove the front panel and rear panel to remove the L-shaped bracket that secures the cabinet and the pallet, and secure the sliding

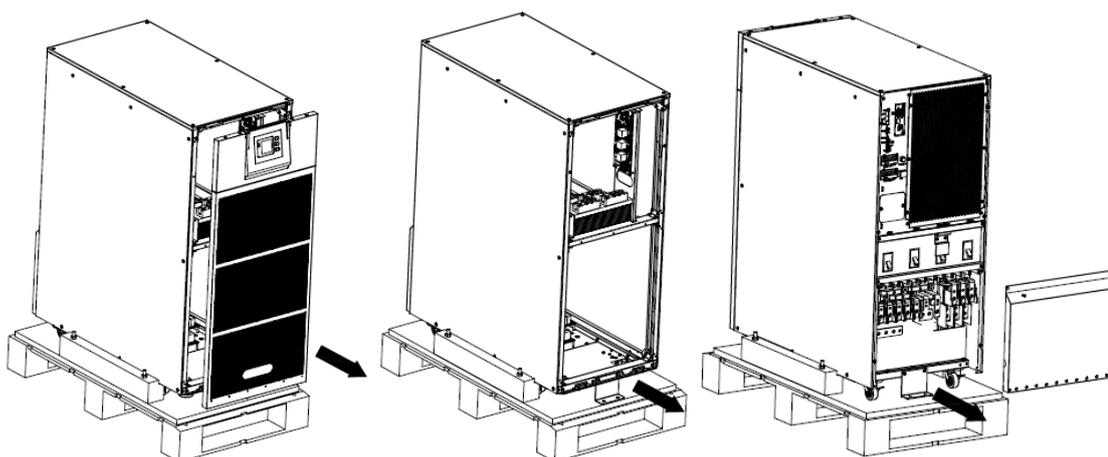


**Step 8** Remove the front panel and rear panel to remove the L-shaped bracket and the plates at the left and right side of the UPS that secures the cabinet and the pallet, and secure the sliding

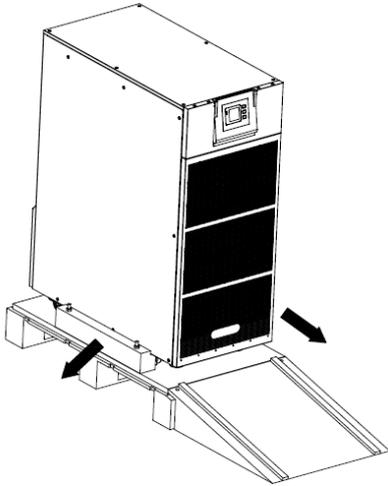


### 3.2 Cabinet Outlook

50kVA&60kVA

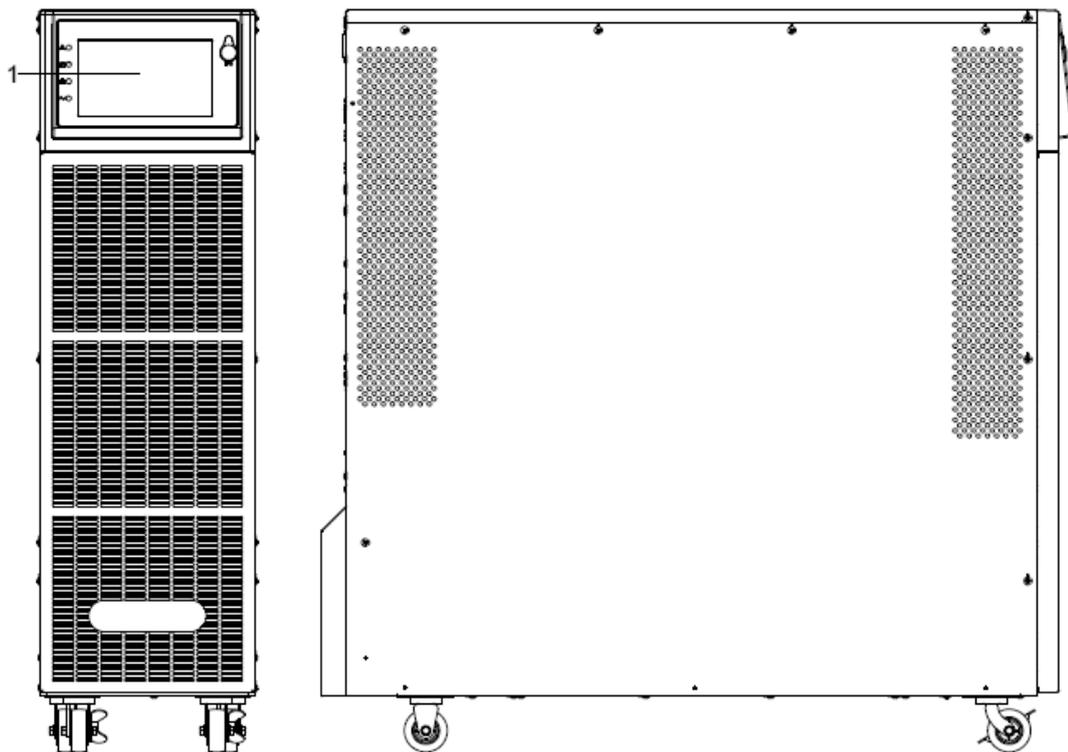


Front View Side View

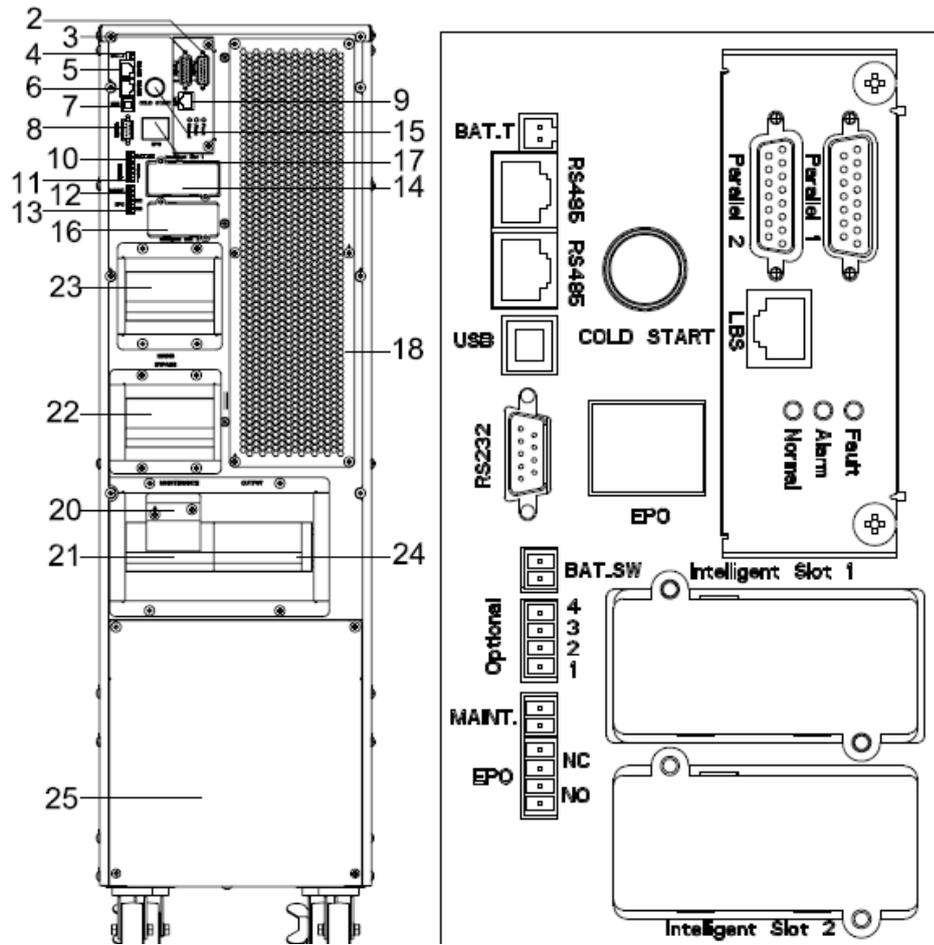


Rear View

100kVA&120kVA

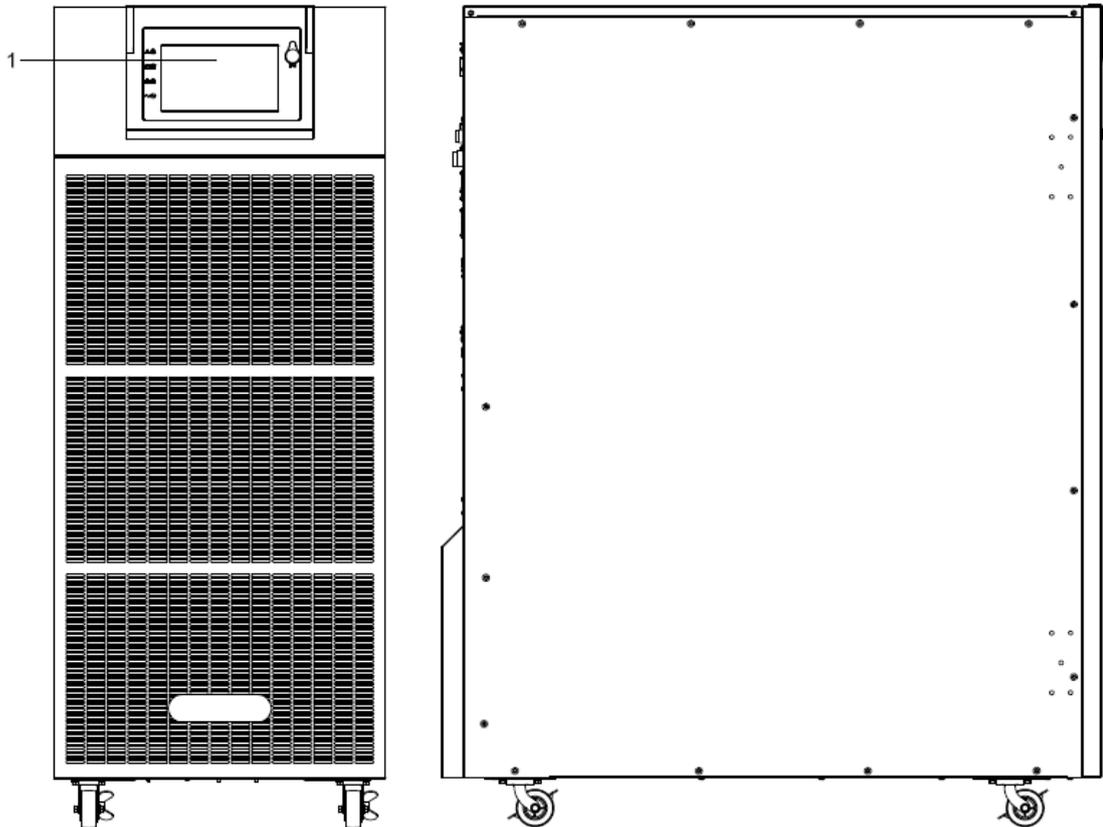


Front View Side View

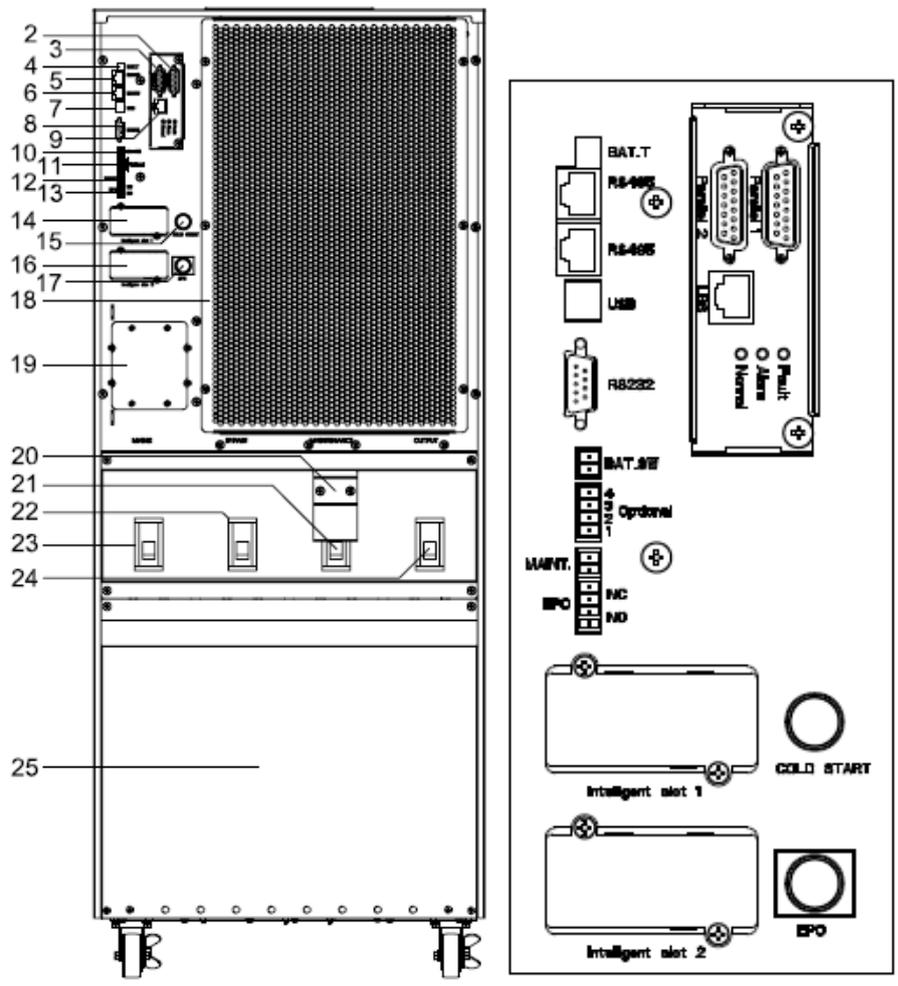


Rear View

150kVA&160kVA

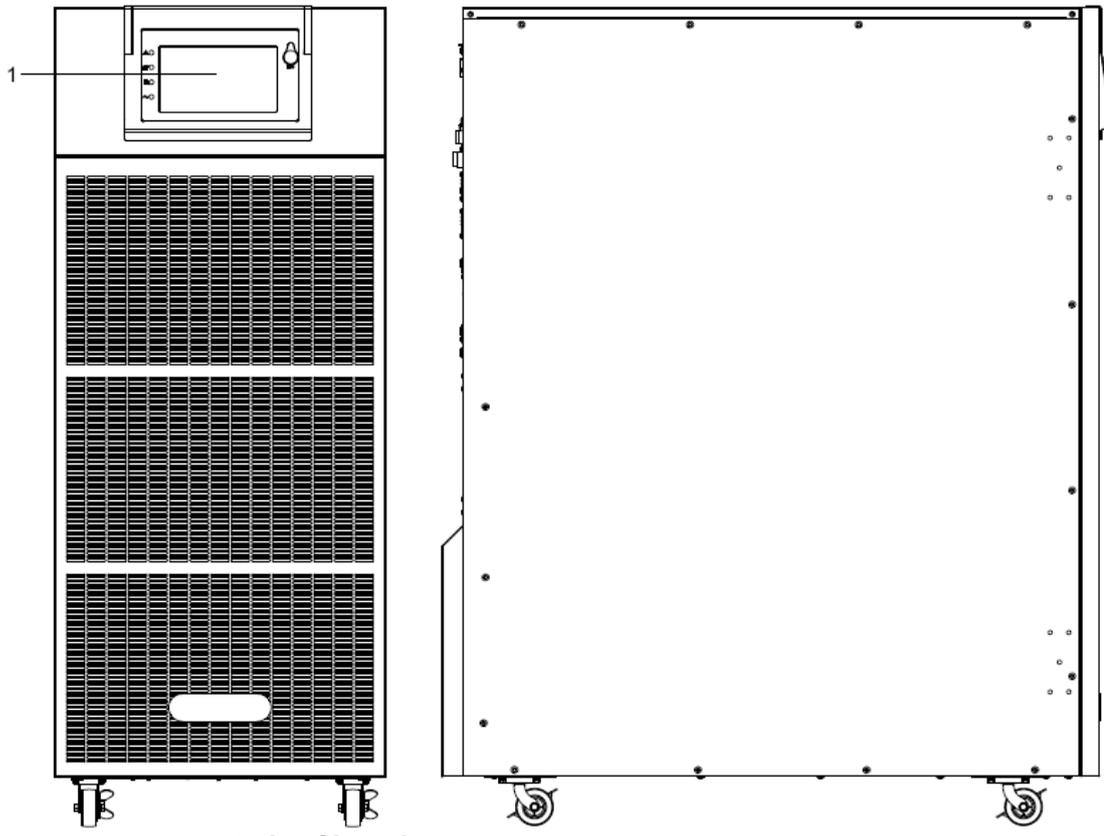


Front View Side View

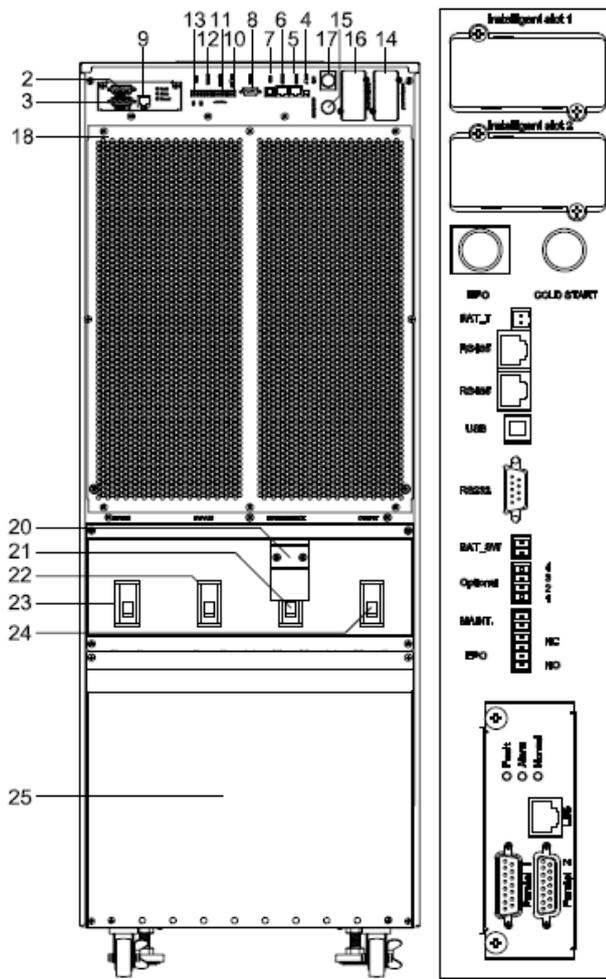


Rear View

200kVA

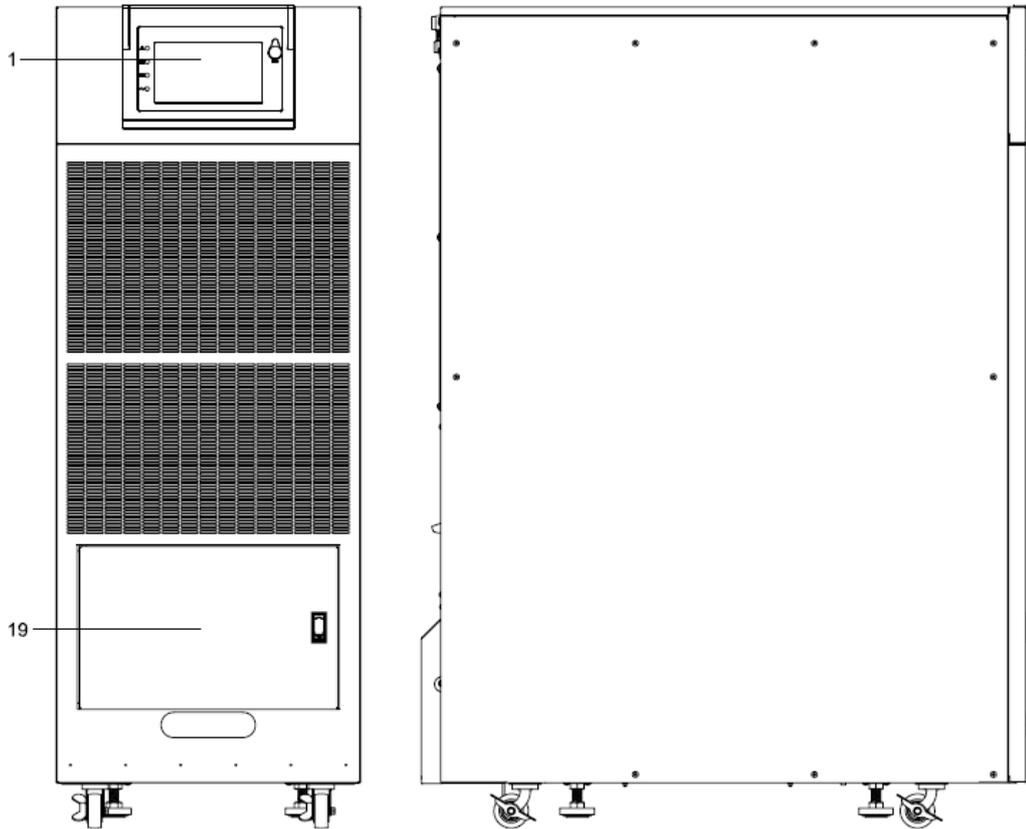


Front View Side View

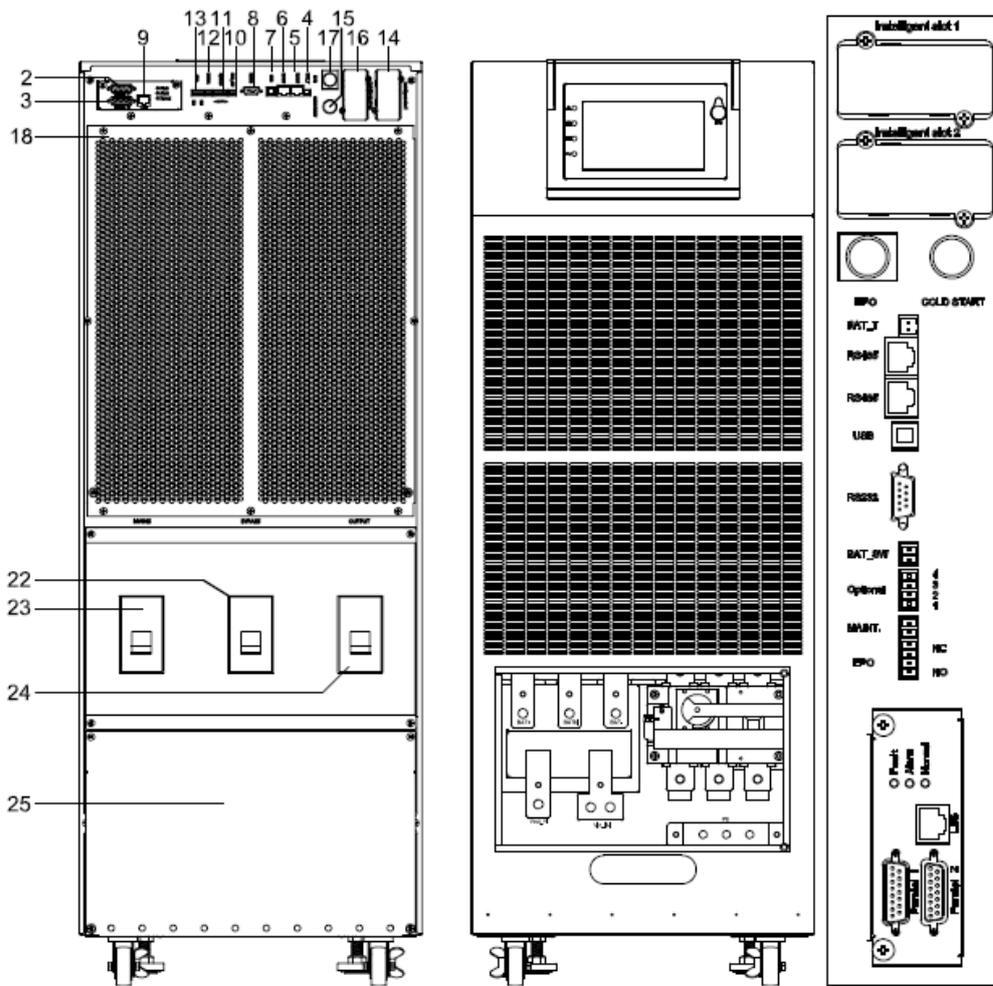

Rear View

(1) LCD panel	(2) Parallel port 1
(3) Parallel port 2	(4) Temperature sensor port (for NTC)
(5) RS485 port(for RS485 temperature sensor)	(6) RS485 port(for RS485 temperature sensor)
(7) USB port	(8) RS232
(9) LBS port	(10) BAT_SW : detect battery switch status
(11) Optional port (Port for backfeed protection, or for battery breaker driver to prevent battery over-drain after UPS shuts down)	(12) MAINTAIN-AUXSWS port
(13) REPO port	(14) Intelligent Slot1 (SNMP card/ Relay card)
(15) Cold-start	(16) Intelligent Slot2 (SNMP card/ Relay card)
(17) EPO button	(18) Cover for UPS Maintenance
(19) SPD (optional) for 100-120kVA; Front door for 200kVA(Battery and neutral copper bar and maintenance switch)	(20) Maintenance breaker(200kVA is switch) cover
(21) Maintenance breaker (200kVA is switch)	(22) Bypass breaker
(23) Mains breaker	(24) Output breaker
(25) Terminal block cover	

### 3.3 LCD control panel

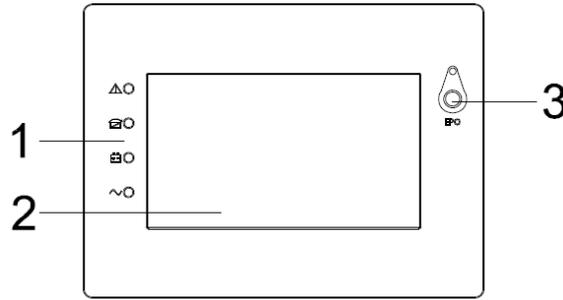

**LCD control panel introduction**

- (1) LED ( from top to bottom: “Fault”, “bypass”, “battery”, “inverter” )
- (2) LCD display
- (3) EPO button

### 3.4 Installation notes

Note: Consider for the convenience of operation and maintenance, the space in front and back of the cabinet should be left at least 100cm and 80cm respectively when installing the cabinet.

◆ Please place the UPS in a clean, stable environment, avoid the vibration, dust, humidity, flammable gas and liquid, corrosive. To avoid from high room temperature, a system of room extractor fans is recommended to be installed. Optional air filters are available if the UPS operates in a dusty environment.

◆ The environment temperature around UPS should keep in a range of 0°C~40°C. If the environment temperature exceeds 40°C, the rated load capacity should be reduced by 12% per 5°C. The max temperature can't be higher than 50°C.

◆ If the UPS is dismantled under low temperature, it might be in a condensing condition. The UPS can't be installed unless the internal and external of the equipment is fully dry. Otherwise, there will be in danger of electric shock.

◆ Batteries should be mounted in an environment where the temperature is within the required specs. Temperature is a major factor in determining battery life and capacity. In a normal installation, the battery temperature is maintained between 15°C and 25°C. Keep batteries away from heat sources or main air ventilation area, etc.



#### **WARNING!**

**Typical battery performance data are quoted for an operating temperature between 20°C and 25°C. Operating it above this range will reduce the battery life while operation below this range will reduce the battery capacity.**

◆ Should the equipment not be installed immediately it must be stored in a room so as to protect it against excessive humidity and or heat sources.



#### **CAUTION!**

**An unused battery must be recharged every 6 months Temporarily connecting the UPS to a suitable AC supply mains and activating it for the time required for recharging the batteries.**

◆ The highest altitude that UPS may work normally with full load is 1500 meters. The load capacity should be reduced when this UPS is installed in place whose altitude is higher than 1500

meters, shown as the following table:

(Load coefficient equals max load in high altitude place divided by nominal power of the UPS)

Altitude(m)	1500	2000	2500	3000	3500	4000	4500	5000
Load coefficient	100%	95%	90%	85%	80%	75%	70%	65%

◆The UPS cooling is depending on fan, so it should be kept in good air ventilation area. There are many ventilation holes on the front and rear, so they should not be blocked by any exotic obstacles.

### 3.5 External Protective Devices

For safety reasons, it is necessary to install, external circuit breaker at the input A.C. supply and the battery. This chapter provides guidelines for qualified installers that must have the knowledge of local wiring practices for the equipment to be installed.

#### ◆ External Battery

The UPS and its associated batteries are protected against the effect of over-current through a DC compatible thermo-magnetic circuit-breaker (or a set of fuses) located close to the battery.

#### ◆ UPS Output

Any external distribution board used for load distribution shall be fitted with protective devices that may avoid the risk of UPS overloaded.

#### ◆ Over-current

Protection device shall be installed at the distribution panel of the incoming main supply. It may identify the power cables current capacity as well as the overload capacity of the system.

#### CAUTION!



**Select a thermo magnetic circuit-breaker with an IEC 60947-2 trip curve C (normal) for 125% of the current as listed below.**

### 3.6 Power Cables

◆The cable design shall comply with the voltages and currents provided in this section, Kindly follow local wiring practices and take into consideration the environmental conditions (temperature and physical support media) .



#### WARNING!

**Upon starting. Please ensure that you are aware of the location and operation of the external isolators which are connected to the UPS input/bypass supply of the mains distribution panel. Check to see if these supplies are electrically isolated. And post and necessary warning signs to prevent any inadvertent operation.**

#### 3.6.1 Recommended cross-sectional areas for power cables

UPS cabinet	Cable Dimension			
	AC Input (mm <sup>2</sup> )	AC Output (mm <sup>2</sup> )	DC Input (mm <sup>2</sup> )	Grounding (mm <sup>2</sup> )
50kVA	25	16	50	16
60kVA	35	25	50	25
100kVA	70	50	120	35
120kVA	95	70	150	50
150kVA	120	95	185	70

<b>160kVA</b>	120	95	185	70
<b>180kVA</b>	120	95	185	70
<b>200kVA</b>	150	100	120*2	95

- ◆ When selecting, connecting, and routing power cables, follow local safety regulations and rules.
- ◆ If external conditions such as cable layout or ambient temperatures change, perform verification in accordance with the IEC-60364-5-52 or local regulations.
- ◆ If the rated voltage is 400 V, multiply the currents by 0.95. If the rated voltage is 415 V, multiply the currents by 0.92.
- ◆ If primary loads are non-linear loads, increase the cross-sectional areas of neutral wires 1.5–1.7 times.
- ◆ The nominal battery discharge current refers to the current of forty 12 V batteries at 480V in standard configuration.
- ◆ The maximum battery discharge current refers to the current when forty 12 V batteries in standard configuration, that is, two hundred and forty 2 V battery cells (1.67 V/cell), stop discharging.
- ◆ The battery cable specifications are selected based on 40 batteries by default and compatible with application scenarios with 30–50 batteries.
- ◆ When the mains input and bypass input share a power source, configure both types of input power cables as mains input power cables. The cables listed in Table are used only when the following requirements are met:
  - Routing mode: Routing the cables over the cable ladder or bracket in a single layer (IEC60364-5-52 middle E).
  - The ambient temperature is 30°C.
  - The AC voltage loss is less than 3%, and the DC voltage loss is less than 1%.
  - 90°C copper flexible cable.
  - The length of the AC power cables of a UPS is no longer than 30 m and DC power cables no longer than 50 m.

### 3.6.2 Power cable connector requirements

Model	Connector	Connection Mode	Bolt Type	Bolt Hole Diameter	Torque
50-60kVA	Mains input connector	Crimped OT terminals	M8	M8	20N•m
	Bypass input connector	Crimped OT terminals	M8	M8	20N•m
	Battery input connector	Crimped OT terminals	M8	M8	20N•m
	Output connector	Crimped OT terminals	M8	M8	20N•m
	Grounding connector	Crimped OT terminals	M8	M8	20N•m
100-120kVA	Mains input connector	Crimped OT terminals	M10	11mm	26N•m
	Bypass input connector	Crimped OT terminals	M10	11mm	26N•m
	Battery input connector	Crimped OT terminals	M10	11mm	26N•m

	Output connector	Crimped OT terminals	M10	11mm	26N•m
	Grounding connector	Crimped OT terminals	M10	11mm	26N•m
150-180kVA	Mains input connector	Crimped OT terminals	M10	11mm	26N•m
	Bypass input connector	Crimped OT terminals	M10	11mm	26N•m
	Battery input connector	Crimped OT terminals	M10	11mm	26N•m
	Output connector	Crimped OT terminals	M10	11mm	26N•m
	Grounding connector	Crimped OT terminals	M10	11mm	26N•m
200kVA	Mains input connector	Crimped OT terminals	M10	11mm	26N•m
	Bypass input connector	Crimped OT terminals	M10	11mm	26N•m
	Battery input connector	Crimped OT terminals	M10	11mm	26N•m
	Output connector	Crimped OT terminals	M10	11mm	26N•m
	Grounding connector	Crimped OT terminals	M10	11mm	26N•m

### 3.6.3 Recommended input front-end and output back-end circuit breakers

UPS capacity	Component	Specifications
50kVA	Mains input circuit breaker	100A 3P
	Bypass input circuit breaker	100A 3P
	Output branch circuitbreaker	100A 3P
60kVA	Mains input circuit breaker	125A 3P
	Bypass input circuit breaker	125A 3P
	Output branch circuitbreaker	125A 3P
100kVA	Mains input circuit breaker	200A 3P
	Bypass input circuit breaker	200A 3P
	Output branch circuitbreaker	200A 3P
120kVA	Mains input circuit breaker	250A 3P
	Bypass input circuit breaker	250A 3P
	Output branch circuitbreaker	250A 3P
150kVA	Mains input circuit breaker	320A 3P
	Bypass input circuit breaker	320A 3P
	Output branch circuitbreaker	320A 3P

160kVA	Mains input circuit breaker	320A 3P
	Bypass input circuit breaker	320A 3P
	Output branch circuitbreaker	320A 3P
180kVA	Mains input circuit breaker	320A 3P
	Bypass input circuit breaker	320A 3P
	Output branch circuitbreaker	320A 3P
200kVA	Mains input circuit breaker	400A 3P
	Bypass input circuit breaker	400A 3P
	Output branch circuitbreaker	400A 3P



### **CAUTION!**

**Protective earth cable: Connect each cabinet to the main ground system. For Grounding connection, follow the shortest route possible.**



### **WARNING!**

**Failure to follow adequate earthing procedures may result in electromagnetic interference or in hazards involving electric shock and fire**

## **3.7 Power cable connect**


Once the equipment has been finally positioned and secured, connect the power cables as described in the following procedure.

Verify the UPS is totally isolated from its external power source and also all power isolators of the UPS are open. Check to see if they are electrically isolated, and post any necessary warning signs to prevent their inadvertent operation.


Open the UPS rear panel; Remove the cover of terminals for wiring easily.

### **3.7.1 Common input connection**


#### **50kVA&60kVA**

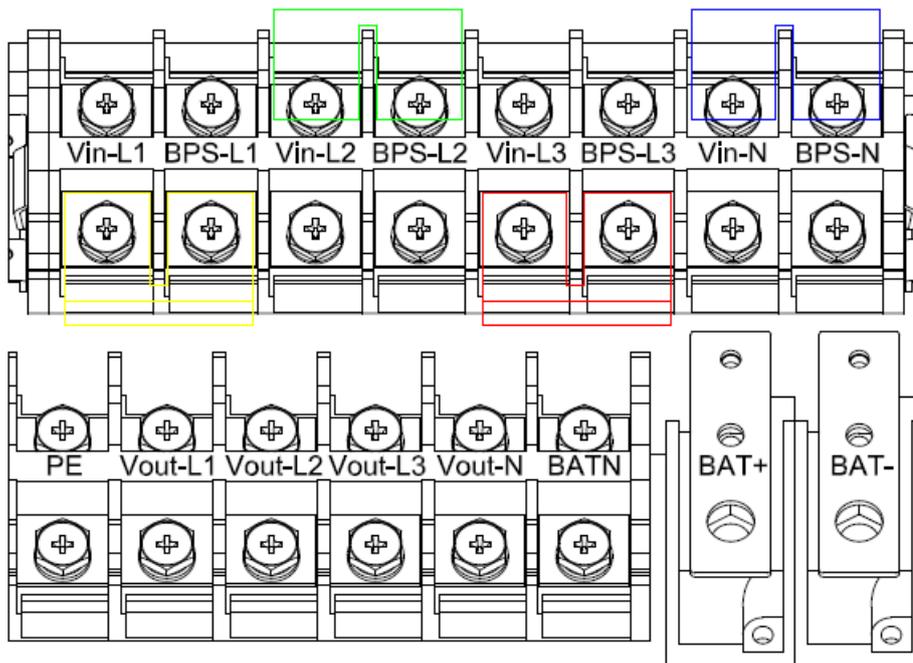

**100kVA-180 kVA**

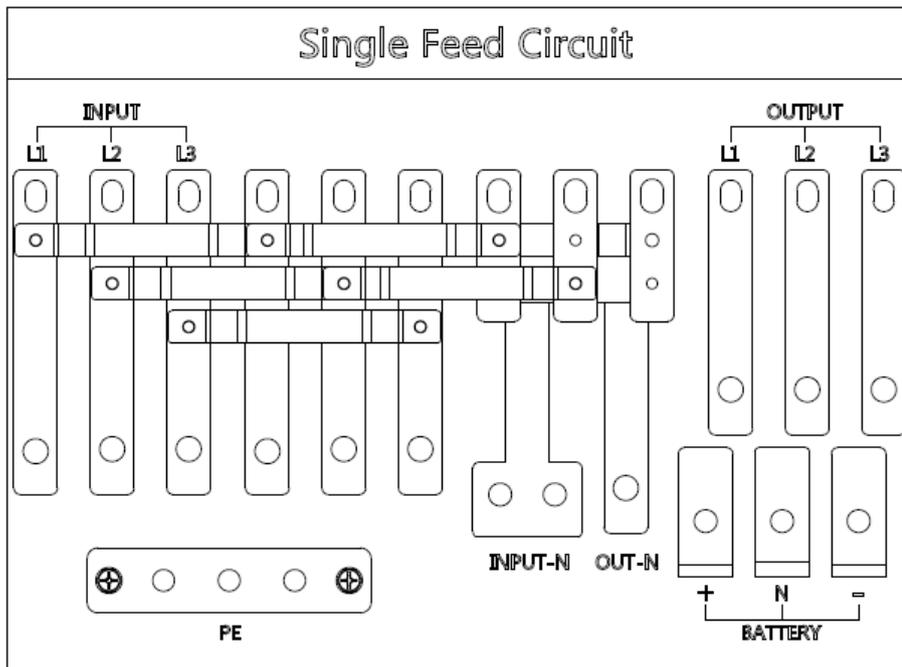



**200 kVA**

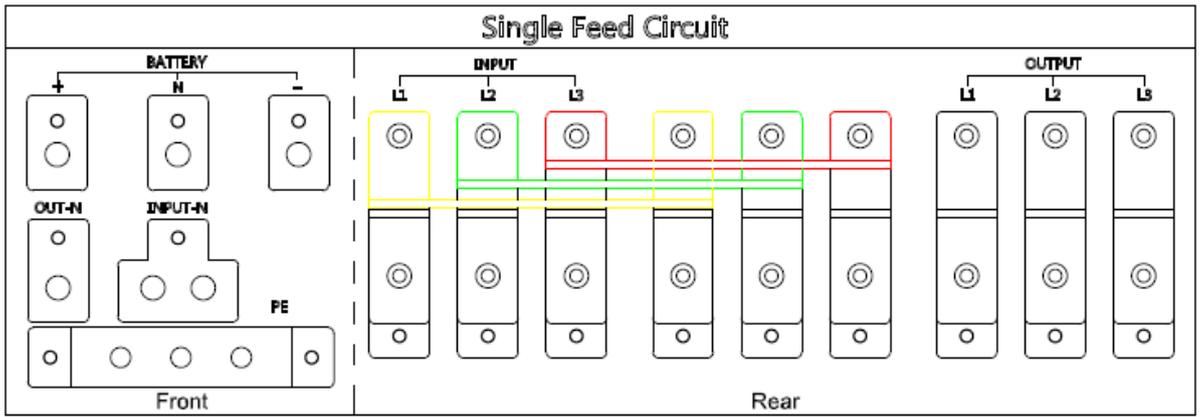


INPUT Primary input Line	OUTPUT
	<b>Vout-L1:</b> Output Phase L1
<b>Vin-L1:</b> Primary input Phase L1	<b>Vout-L2:</b> Output Phase L2
<b>Vin-L2:</b> Primary input Phase L2	<b>Vout-L3:</b> Output Phase L3
<b>Vin-L3:</b> Primary input Phase L3	<b>Vout-N:</b> Output Neutral
<b>Vin-N:</b> Input Neutral for primary and secondary input	<b>PE:</b> Grounding
	<b>BAT+:</b> Positive terminal of the batteries string
	<b>BATN:</b> Neutral terminal of the batteries string
	<b>BAT-:</b> Negative terminal of the batteries string

### 3.7.2 Dual input connection


50kVA & 60kVA

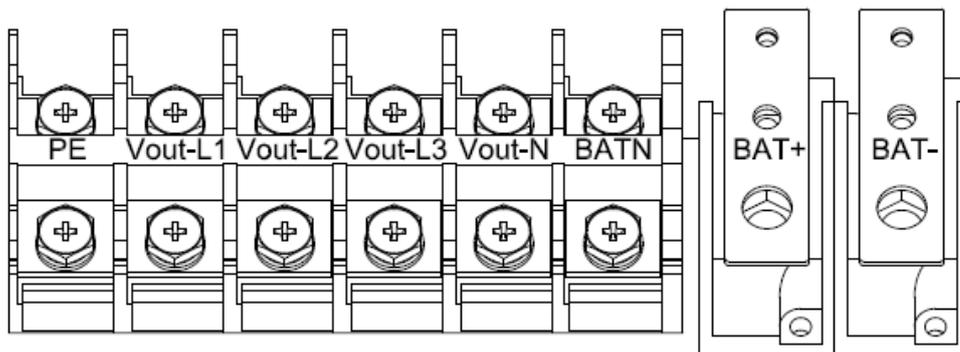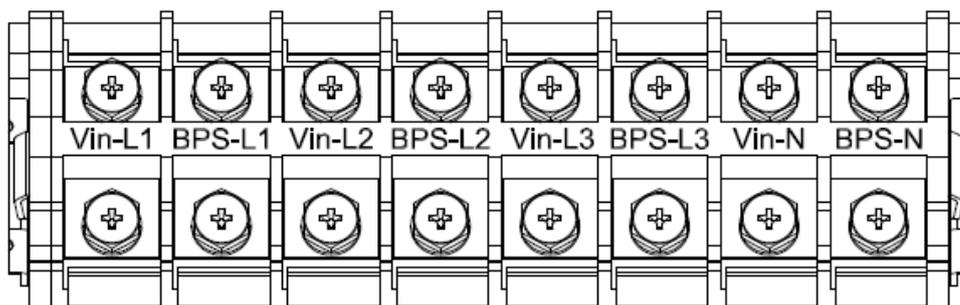

100kVA -180kVA

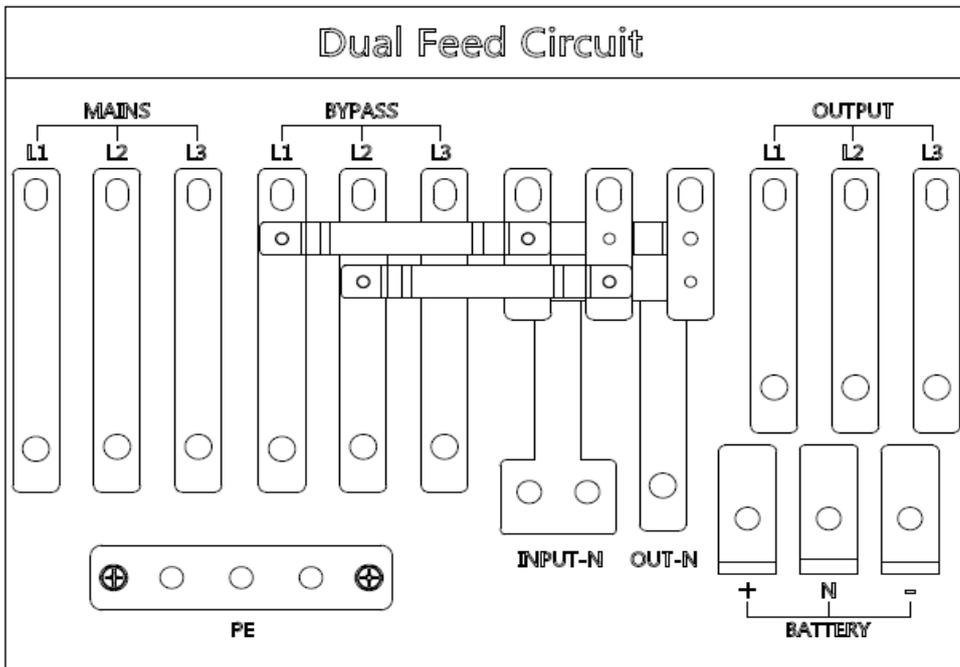

**200kVA**

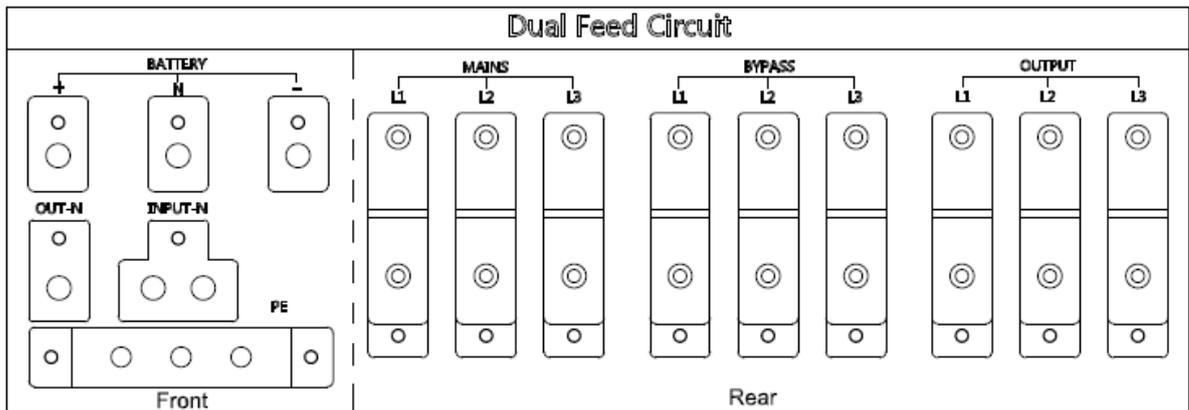

<b>Mains</b> Primary input Line	<b>Output</b>
<b>Bypass</b> Secondary/Bypass input line (optional)	<b>Vout-L1:</b> Output Phase L1
<b>Vin-L1:</b> Primary input Phase L1	<b>Vout-L2:</b> Output Phase L2
<b>Vin-L2:</b> Primary input Phase L2	<b>Vout-L3:</b> Output Phase L3
<b>Vin-L3:</b> Primary input Phase L3	<b>Vout-N:</b> Output Neutral
<b>Vin-N:</b> Input Neutral for primary and secondary input	<b>PE:</b> Grounding
<b>BPS-L1:</b> Secondary input Phase L1	<b>BAT+:</b> Positive terminal of the batteries string
<b>BPS-L2:</b> Secondary input Phase L2	<b>BATN:</b> Neutral terminal of the batteries string
<b>BPS-L3:</b> Secondary input Phase L3	<b>BAT-:</b> Negative terminal of the batteries string


**Warning!**



In the case of “Dual input” operation, make sure the copper wire between each input lines have been removed. The AC input and the AC bypass

supplies must be referenced to the same neutral point.

Choose appropriate power cable. (Refer to the table above) and pay attention to the diameter of the connection terminal of the cable that should be greater than or equal to that of the connection poles;

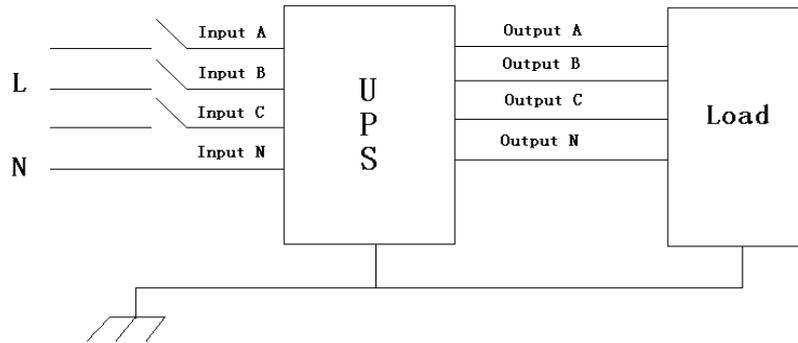

### WARNING!



If the load equipment is not ready to accept power on the arrival of the commissioning engineer then ensure that the system output cables are safely isolated at their ends

Connect the safety earth and any necessary bonding earth cables to the copper earth screw located on the floor of the equipment below the power connections. All cabinets in the UPS must be grounded properly.




### CAUTION!

The earthing and neutral bonding arrangement must be in accordance with local and national codes of practice.

## 3.8 Battery connection

The UPS adopts positive and negative double battery framework, total 30 (optional 32/34/36/38/40/42/44/46/48/50) in series. A neutral cable is retrieved from the joint between the cathode of the 15<sup>th</sup> (16<sup>th</sup>/17<sup>th</sup>/18<sup>th</sup>/19<sup>th</sup>/20<sup>th</sup>/21<sup>th</sup>/22<sup>th</sup>/23<sup>th</sup>/24<sup>th</sup>/25<sup>th</sup>) and the anode of the 16<sup>th</sup> (17<sup>th</sup>/18<sup>th</sup>/19<sup>th</sup>/20<sup>th</sup>/21<sup>th</sup>/22<sup>th</sup>/23<sup>th</sup>/24<sup>th</sup>/25<sup>th</sup>/26<sup>th</sup>) of the batteries. Then the neutral cable, the battery Positive and the battery negative are connected with the UPS respectively. The battery sets between the Battery anode and the neutral are called positive batteries and that between neutral and cathode are called negative ones. The user can choose the capacity and the numbers of the batteries according to their desire.

External battery connections for long-run units.

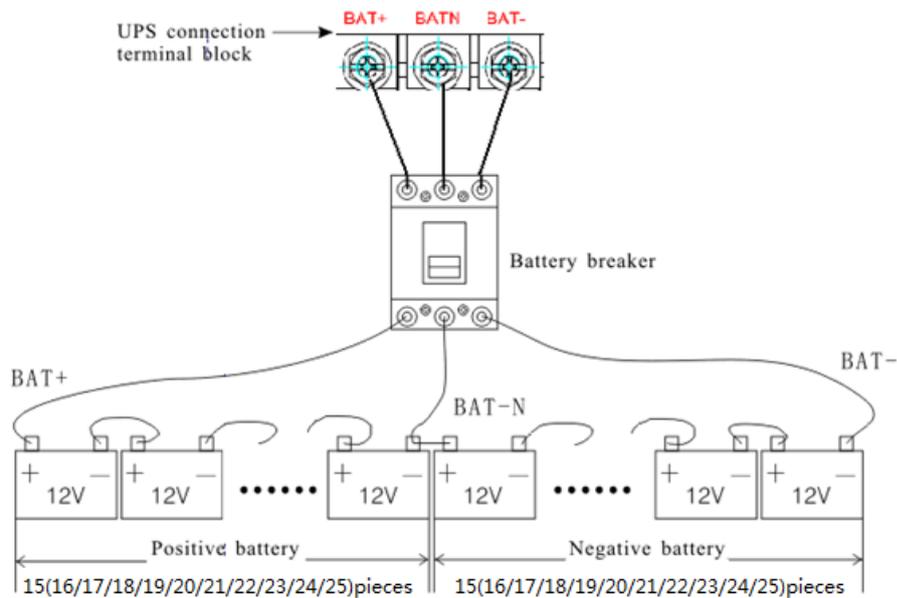

Note:

The BAT+ of the UPS connect poles is connected to the anode of the positive battery, the BAT-N is connected to the cathode of the positive battery and the anode of the negative battery, the BAT- is connected to the cathode of the negative battery.

factory setting of the long-run unit is battery quantity---40pcs, battery capacity---12V100AH (charger current 15A). When connecting 30/32/34/36/38/42/44/46/48/50 batteries, please re-set desired battery quantity and its capacity after UPS starts at AC mode. Charger current could be adjusted automatically according to battery capacity selected. All related settings can be done through LCD panel or monitoring software



#### CAUTION!

Ensure correct polarity battery string series connection. I.e. inter-tier and inter block connections are from (+) to (-) terminals. Don't mix batteries with different capacity or different brands, or even mix up new and old batteries, either.



#### WARNING!


Ensure correct polarity of string end connections to the Battery Circuit Breaker and from the Battery Circuit Breaker to the UPS terminals i.e. (+) to (+) / (-) to (-) but disconnect one or more battery cell links in each tier. Do not reconnect these links and do not close the battery circuit breaker unless authorized by the commissioning engineer.

### 3.9 UPS parallel Installation

The following sections introduce the installation procedures specified to the parallel system.

#### 3.9.1 Cabinet installation

Connect all the UPS needed to be put into parallel system as below picture.

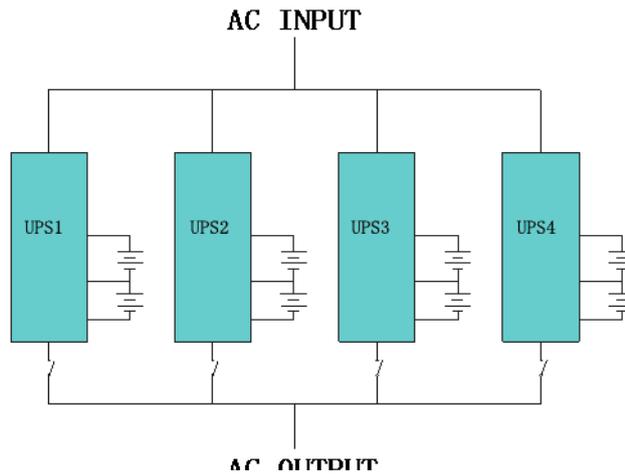

Make sure each UPS input breaker is in “off” position and there is no any output from each UPS connected. Battery groups can be connected separately or in parallel, which means the system itself provides both separate battery and common battery.




**WARNING!**

**Make sure the N, A(L1), B(L2), C(L3)lines are correct, and grounding is well connected.**

**3.9.2 Parallel cable installation**

Shielded and double insulated control cables available must be interconnected in a ring configuration between UPS units as shown below. The ring configuration ensures high reliability of the control.

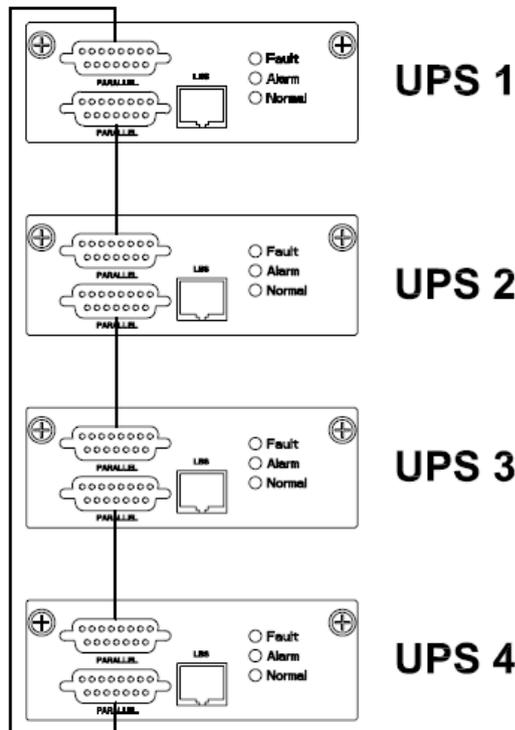

**3.9.3 Requirement for the parallel system**

A group of paralleled UPS behaves as one large UPS system but with the advantage of presenting higher reliability. In order to assure that all UPS are equally utilized and comply with relevant wiring rules, please follow the requirements below:

- 1) All UPS must be of the same rating and be connected to the same bypass source.

- 2) The outputs of all the UPS must be connected to a common output bus.
- 3) The length and specification of power cables including the bypass input cables and the UPS output cables should be the same. This facilitates load sharing when operating in bypass mode.

### 3.10 LBS installation


LBS system contains LCD set, communication cable and STS device.

#### 3.10.1 LCD setting

Set every UPS of the systems to be LBS Master or LBS Slave. For instance if the UPS belongs to LBS master system, its LBS setting must be set to Master.


#### 3.10.2 LBS cable installation

The two ports of one mesh wire should be plug into RJ45 interface of any one UPS of both master and slave system.

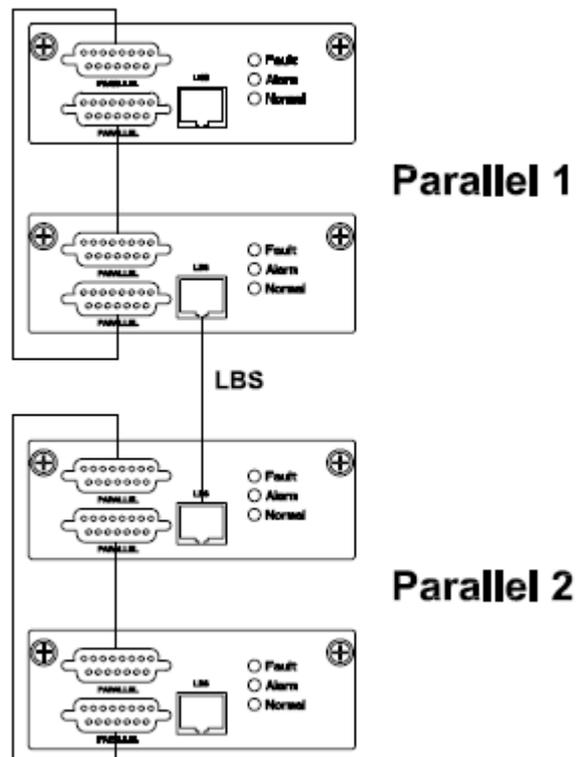


#### 3.10.3 UPS installation

The whole systems is showed below.

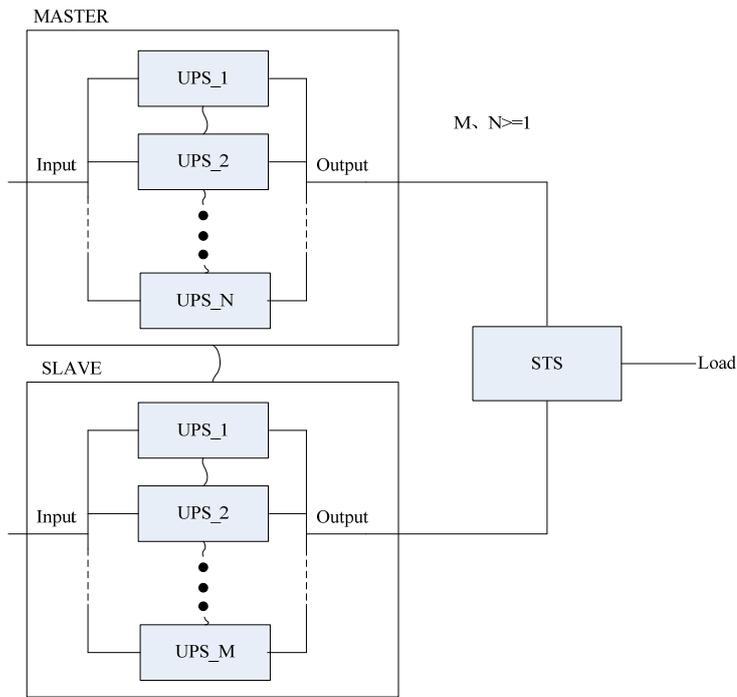


### 3.11 Computer access

- ◆ One end of a USB cable connect to the computer, the other end connect to the USB port on the UPS.
- ◆ Open the software Muser5000, click “system” button.

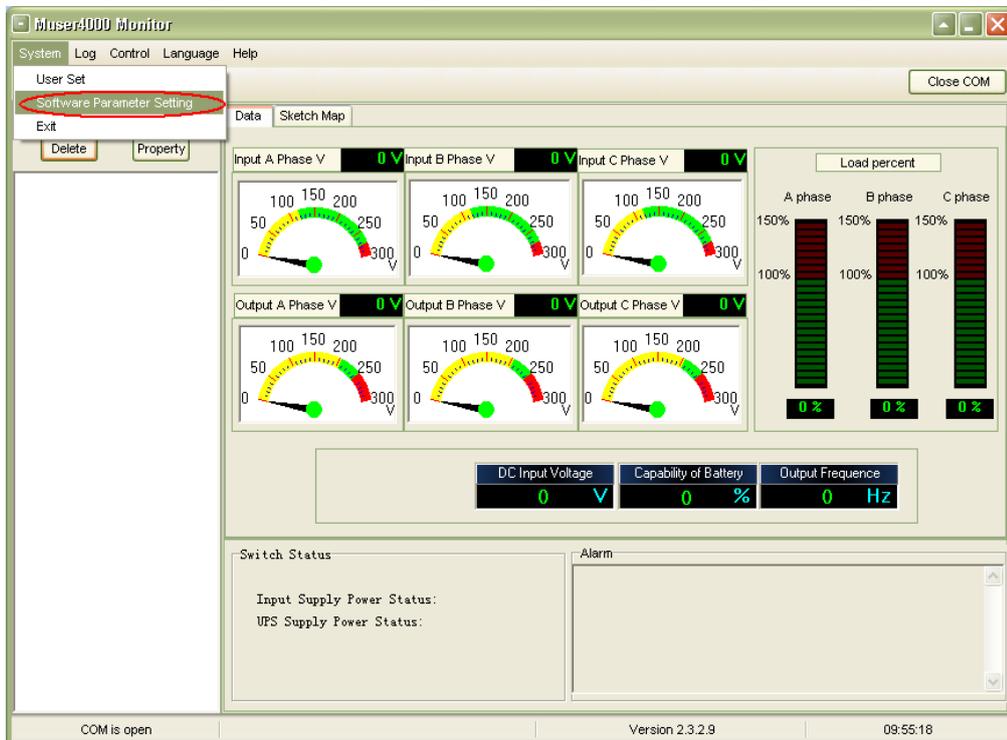


- ◆ A window of “Software Parameter Setting” comes out as below, COM choose according to the UPS , baud rate choose 9600, protocol choose “modbus”, then save this setting.

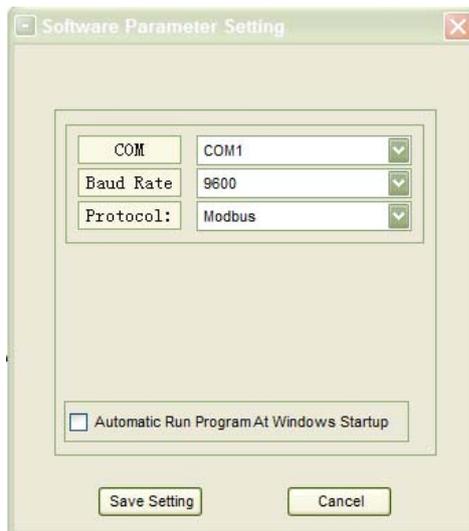

◆ On the main page of Muser5000, click the button of “Append”, then goes to a window of “Append equipment”.



◆ Put the UPS name into “Equipment Name”, and UPS’ ID address into “Equipment address”.

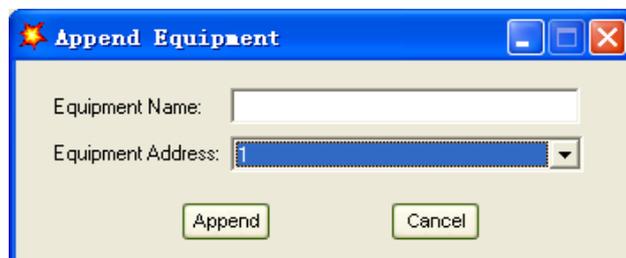

◆ Click the button “Append”, then the connection between UPS & computer is accomplished.



### CAUTION!

**When the UPS worked on inverter. If you want to use PC to set the output voltage and frequency. Must shut down the inverter first**


## 4. Operation

### 4.1 Operation Modes

The UPS is a double-conversion on-line UPS that may operate in the following alternative modes:


#### ◆ Normal mode

The rectifier/charger derives power from the AC Mains and supplies DC power to the inverter while floating and boosting charge the battery simultaneously. Then, the inverter converts the DC power to AC and supplies to the load.

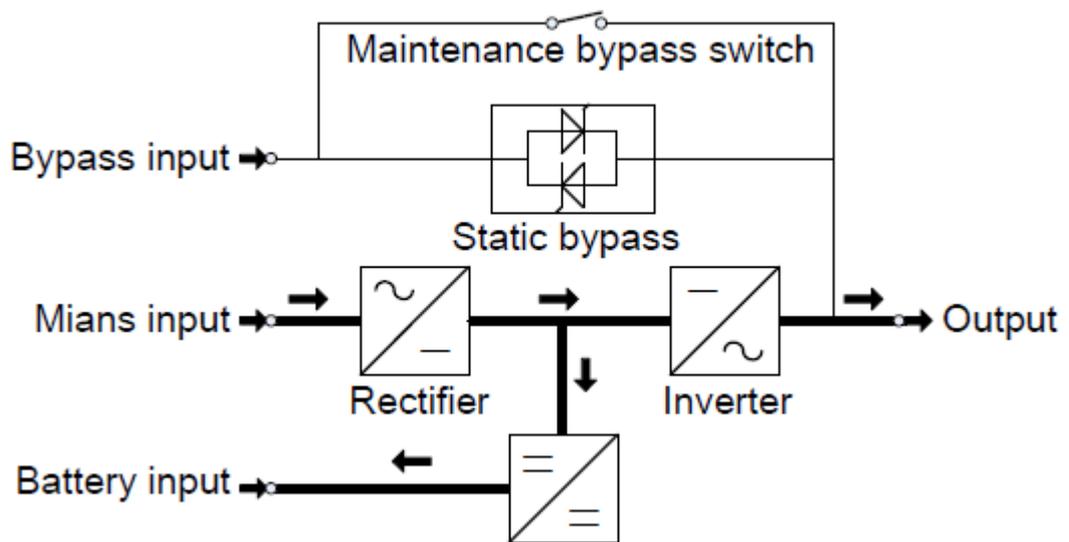


#### ◆ Battery mode (Stored Energy Mode)

If the AC mains input power fails, the inverter, which obtains power from the battery, supplies the critical AC load. There is no power interruption to the critical load. The UPS will automatically return to Normal Mode when AC recovers.

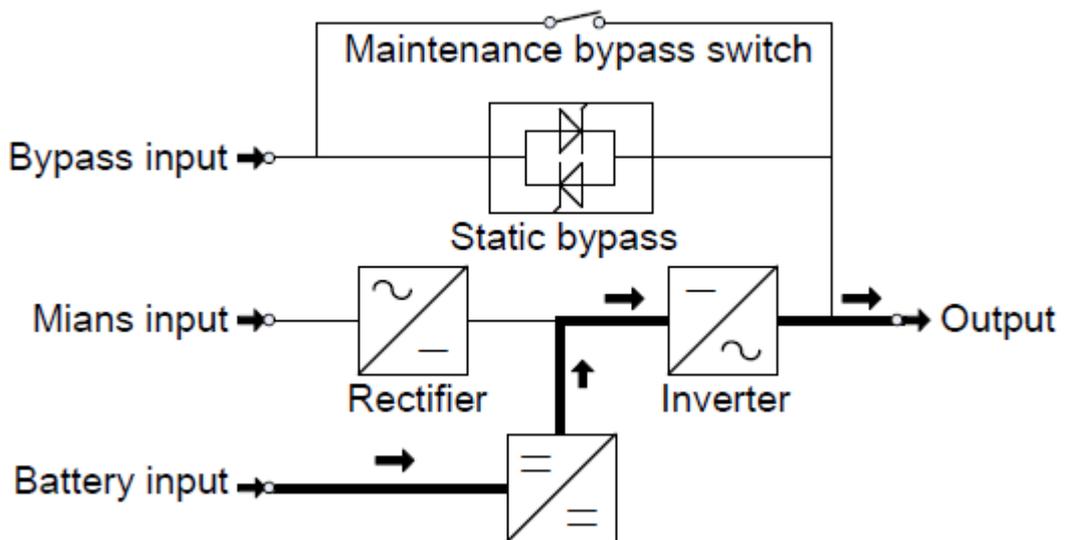


### ◆ Bypass mode

If the inverter is out of order, or if overload occurs, the static transfer switch will be activated to transfer the load from the inverter supply to bypass supply without interruption to the critical load. In the event that the inverter output is not synchronized with the bypass AC source, the static switch will perform a transfer of the load from the inverter to the bypass with power interruption to the critical AC load. This is to avoid paralleling of unsynchronized AC sources. This interruption is programmable but typically set to be less than an electrical cycle e.g. less than 15ms (50Hz) or less than 13.33ms (60Hz).

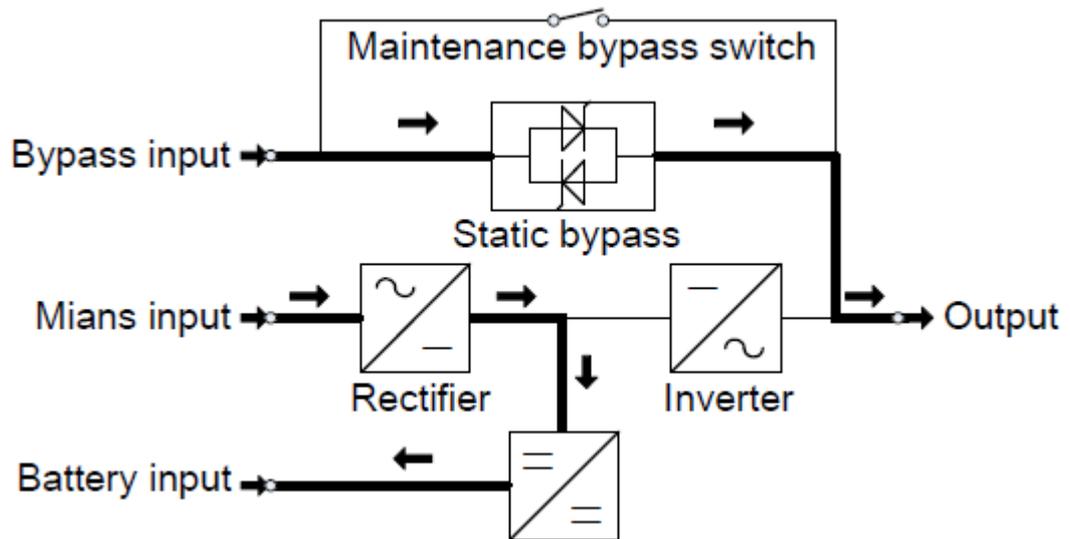


### ◆ ECO Mode

When the UPS is at AC Mode and the requirement to the load is not critical, the UPS can be set at ECO mode in order to increase the efficiency of the power supplied. At ECO mode, the UPS works at Line-interactive mode, so the UPS will transfer to bypass supply. When the AC is out of set window, the UPS will transfer from bypass to Inverter and supplies power from the battery, and then the LCD shows all related information on the screen.

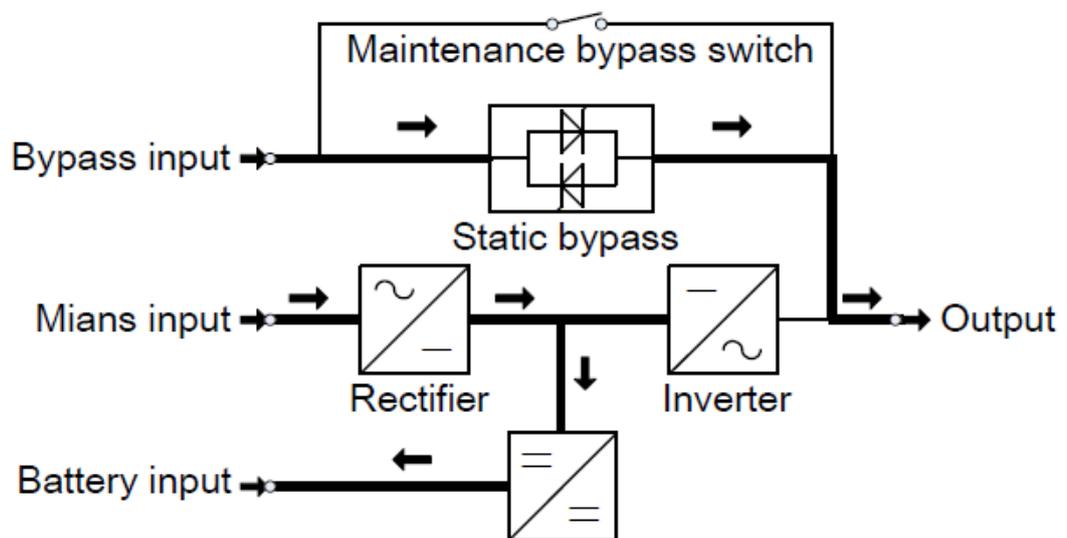

## ◆ Maintenance mode (Manual Bypass)

A manual bypass switch is available to ensure continuity of supply to the critical load when the UPS is out of order or in repair and this manual bypass switch bears for equivalent rated load.

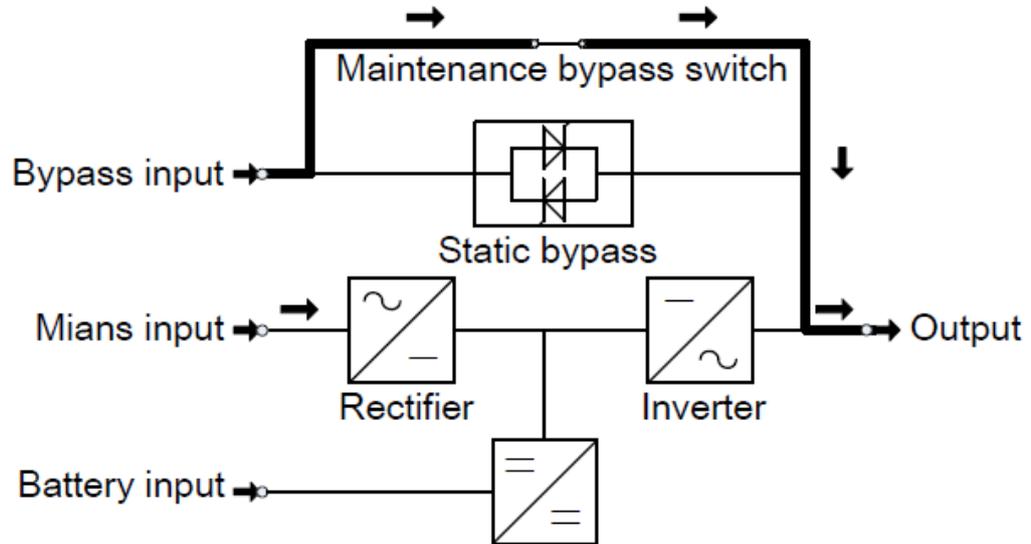

## 4.2 Turn on/off UPS

### 4.2.1 Restart procedure



#### CAUTION!

MAKE SURE GROUNDING IS PROPERLY DONE!

- ◆ Set the Battery Breaker to the “ON” position according to the user’s manual.



#### CAUTION!

Check to see if the load is safely connected with the output of the UPS. If the load is not ready to receive power from the UPS, make sure that it is safely isolated from the UPS output terminals

- ◆ Turn ON OUTPUT breaker. (Below the UPS power units at the front door)
- ◆ Turn ON BYPASS breaker and MAINS breaker. (Below the UPS power units at the front door)

If the Rectifier input is within voltage range, the rectifier will start up in 30 seconds then the inverter will start up after then.

If the rectifier fails at startup, the bypass LED will light up. When the inverter starts up, the UPS will transfer from bypass mode to inverter mode, then the bypass LED extinguishes and the inverter LED lights up.

No matter whether the UPS can work normally or not, all the status will be shown on the LCD display.

## 4.2.2 Test procedure



### CAUTION!

The UPS is operating normally. It may take 60 seconds to boost up the system and perform self-test completely.

- ◆ Switch off the MAINS to simulate utility failure, the rectifier will turn off and the battery should feed the inverter without interruption. At this time, the LEDs of battery should be turned on.
- ◆ Switch on the MAINS to simulate utility recovery, the rectifier will restart automatically after 20 seconds and the inverter will supply to the load. It is suggested to use Dummy loads for testing. The UPS can be loaded up to its maximum capacity during load test.

## 4.2.3 MAINTENANCE BYPASS

To supply the load via Mains, you may simply active the internal mechanical bypass switch.



### CAUTION!

The load is not protected by the UPS when the internal mechanical bypass system is active and the power is not conditioned.

### Switch to mechanical bypass



### CAUTION!

If the UPS is running normally and can be controlled through the display, carry out steps 1 to 6; otherwise, jump to Step 5.

- ◆ Open the cover of maintenance switch, the UPS turns to bypass mode automatically.
- ◆ Turn on MAINTENANCE breaker;
- ◆ Switch OFF BATTERY breaker;
- ◆ Switch OFF MAINS breaker;
- ◆ Switch OFF BYPASS breaker;
- ◆ Switch OFF OUTPUT breaker;

At this time the bypass source will supply to the load through the MAINTENANCE breaker.

### Switch to normal operation (from mechanical bypass)



### CAUTION!

Never attempt to switch the UPS back to normal operation until you have verified that there are no internal UPS faults.

- ◆ Turn ON OUTPUT breaker.
- ◆ Turn ON BYPASS breaker.
- ◆ Turn ON MAINS breaker.

The UPS powers from the static bypass instead of the maintenance bypass, then the bypass LED will light up.

- ◆ Switch OFF the maintenance bypass breaker, then the output is supplied by the static bypass of the UPS.
- ◆ Put on the maintenance switch cover.

The rectifier will operate normally after 30 seconds. If the inverter works normally, the system will be transferred from bypass mode to normal mode.

## 4.2.4 Cold start procedure


### CAUTION!

Follow  procedures when the input AC Utility Failure, but battery is normal

- ◆ Turn on the BATTERY breaker.

The battery will feed the Auxiliary power board.

- ◆ Turn on the OUTPUT breaker.
- ◆ Trigger the cold start (Cold start) button as the position 11 of the below drawing.

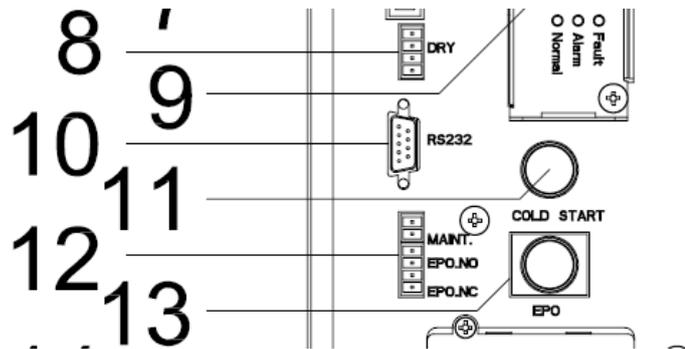

When battery normal, rectifier starts operation, 30s later, inverter starts and operates and battery LED on.

### CAUTION!

Please  close the start button after 30 seconds until closing the battery switch.

## 4.2.5 Shut down procedure



### CAUTION!

This procedure should be followed to completely shut down the UPS and the LOAD. After all power switches, isolators and circuit breakers are opened, there will be no output.

- ◆ Switch OFF the BATTERY breaker;
- ◆ Open the UPS door to easily access to the main power switch;
- ◆ Switch OFF the MAINS breaker.
- ◆ Switch OFF the BYPASS breaker.
- ◆ Open the OUTPUT breaker. The UPS shuts down;
- ◆ To completely isolate the UPS from AC Mains, all input switches of Utility shall be completely off, which includes the ones for rectifier and bypass.
- ◆ The primary input distribution panel, which is often located far away from the UPS area, so a label should be posted to advise service personnel that the UPS circuit is under maintenance.

### WARNING!




Wait for about 5 minutes for the internal D.C. bus bar capacitors to be completely discharged.

## 4.2.6 Parallel setting


- ◆ Connect the UPS with computer. Power on the UPS.
- ◆ Open Muser5000 software, after connecting with the UPS successfully, click “System”->“User Set”




- ◆ Click “Set” at “User Set” window;

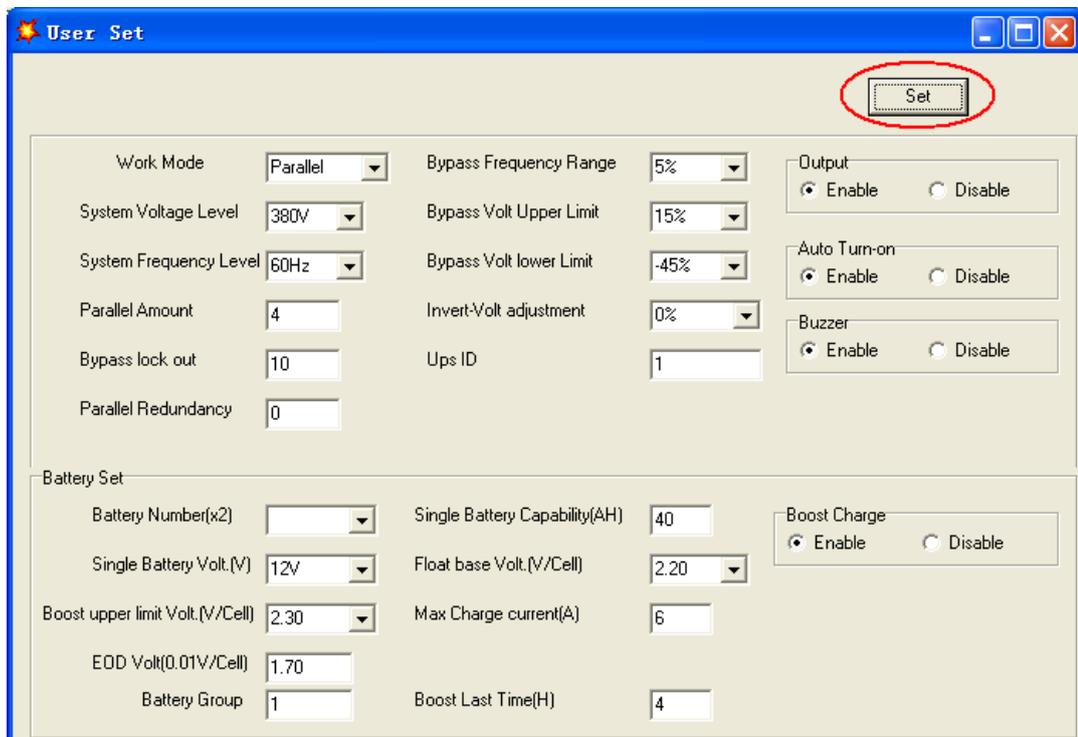

- ◆ At the window of “Data Set”, click “Work Mode”,, choose “Parallel” for the value, then click “Set” as shown in below picture. If the UPS sounds a “beep”, that means the setting is correct.

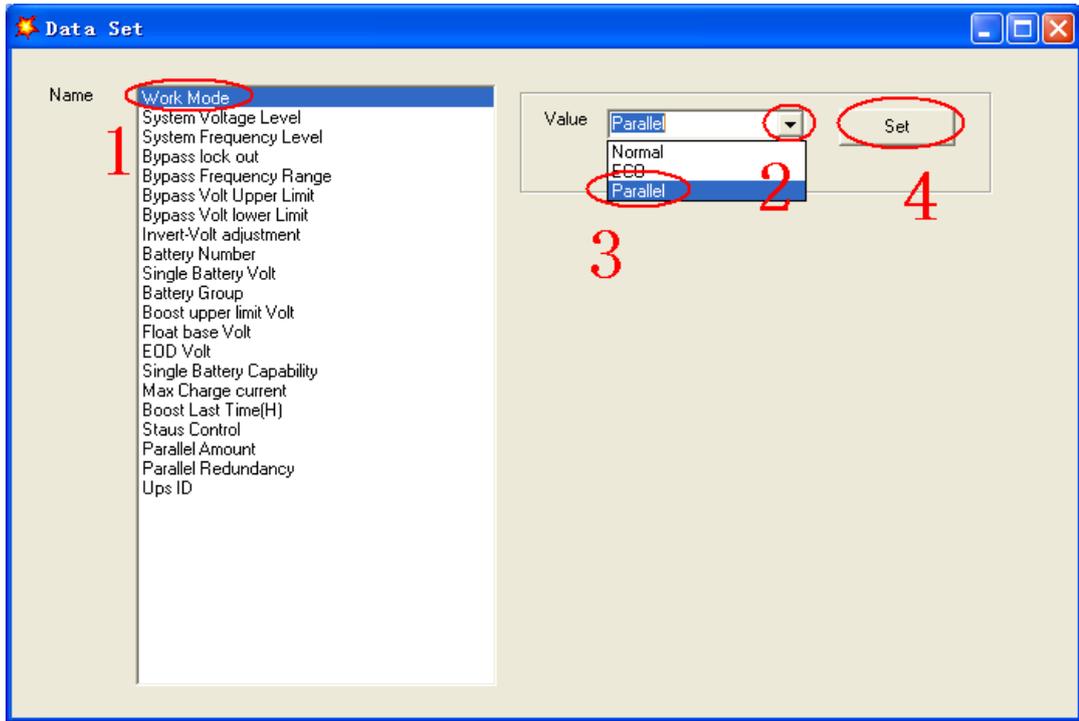

◆At the window of “Data Set”, click “Ups ID”, write a value for the parallel UPS ID at the right side, such as “1”, then click “Set” as shown in below picture. If the UPS sounds a “beep”,that means the setting is correct.

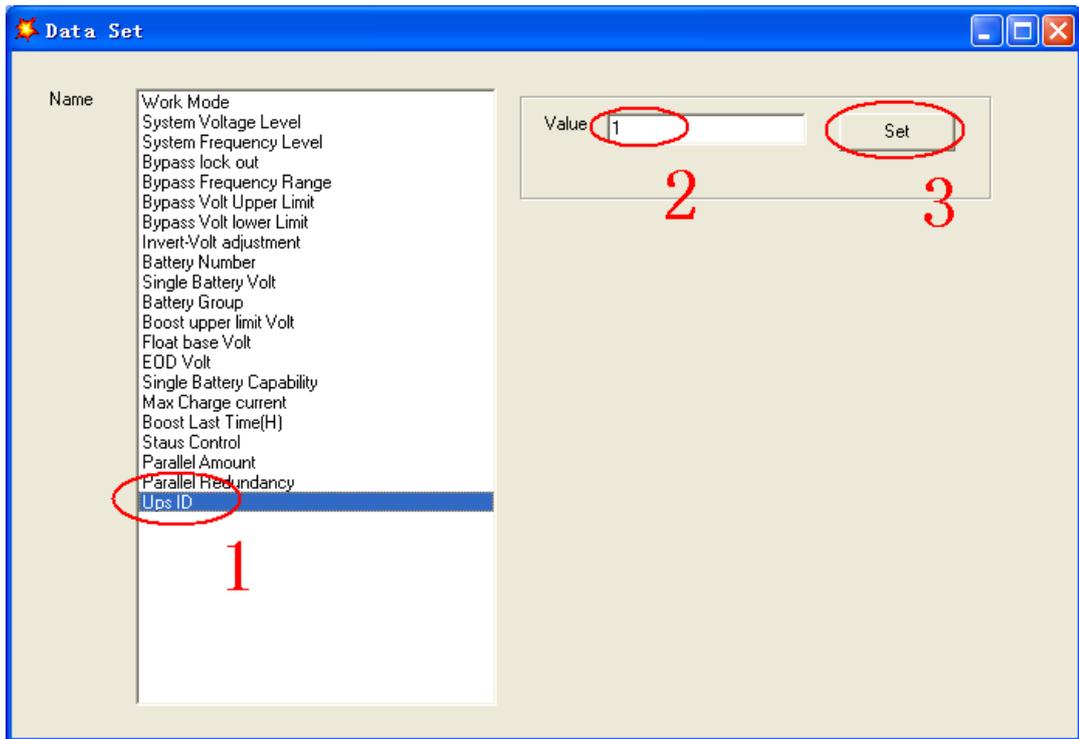

**CAUTION!**

After changing the parallel system ID, the connection between Muser4000 and equipment might be interrupted. If it occurs, please re-connect in accordance with the instruction described before.




**CAUTION!**

Parallel cable cannot be connected when setting the parallel parameters.

- ◆After setting the UPS needed to be paralleled, power off all the UPS. Connect all the UPS according to “parallel cable installation”, and then power on the UPS.

### 4.3 The LCD Display

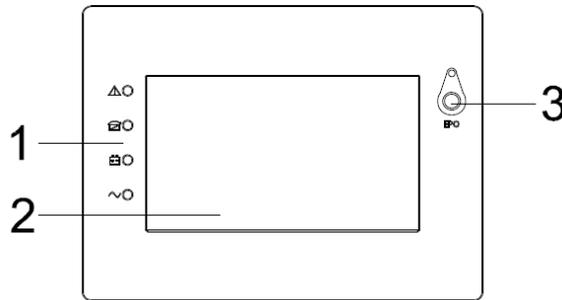

**LCD control panel introduction**

- (1) LED ( from top to bottom: “Fault”, “bypass”, “battery”, “inverter” )
- (2) LCD display
- (3) EPO button


### Introduction



**CAUTION!**

**The display provides more functions than those described in this manual.**

4.3.1 Home page 1, show the UPS operating flow chart, and there are the data entrance of input,output, battery.

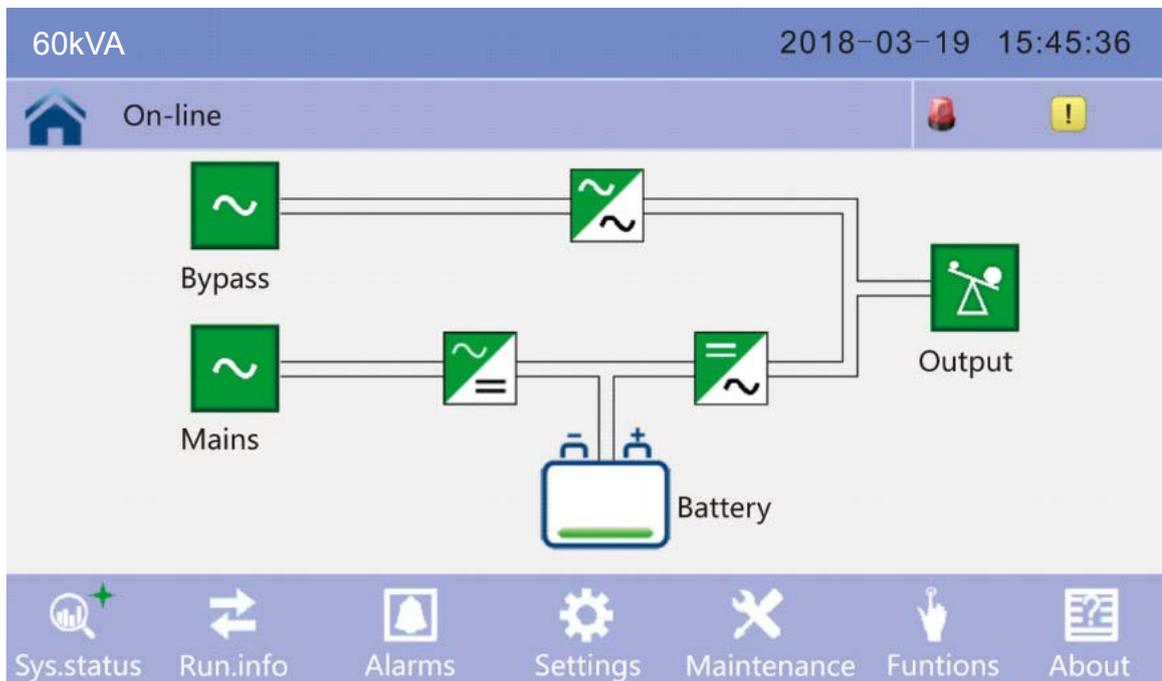

1) Click on the bypass icon to enter the bypass data window, click on the back icon return to last window and click on the homepage icon to jump to main page.

60kVA 2018-03-19 15:45:36

On-line

 Bypass parameter

Phase voltage (V):	120.0	120.0	120.0
Frequency (Hz):	60.0	60.0	60.0



2) Click on the mains icon to enter the mains data window, click on the back icon return to last window and click on the home page icon jump to main page.

60kVA 2018-03-19 15:45:36

On-line

 Mains parameter

Phase voltage (V):	120.0	120.0	120.0
Frequency (Hz):	60.0	60.0	60.0
Phase current (A):	30.0	30.0	30.0
Power factor :	0.99	0.99	0.99



3) Click on the Load icon to enter the output data window, click on the back icon return to last window and click on the home page icon jump to main page.

60kVA 2018-03-19 15:45:36

On-line



Output parameter

Phase voltage (V):	120.0	120.0	120.0
Frequency (Hz):	60.0	60.0	60.0
Phase current (A):	28.9	28.9	28.9
Active power (kW):	20.0	20.0	20.0

4) Click on the battery icon to enter the battery data window, click on the back icon return to last window and click on the home page icon jump to main page.

60kVA 2018-03-19 15:45:36


On-line




Battery parameter

Voltage (V):	120.0	120.0
Current (A):	18.0	18.0
Battery status :	Charging	
Battery temperature (°C):	25	

4.3.2 Click on Runn. info icon to enter the information page.

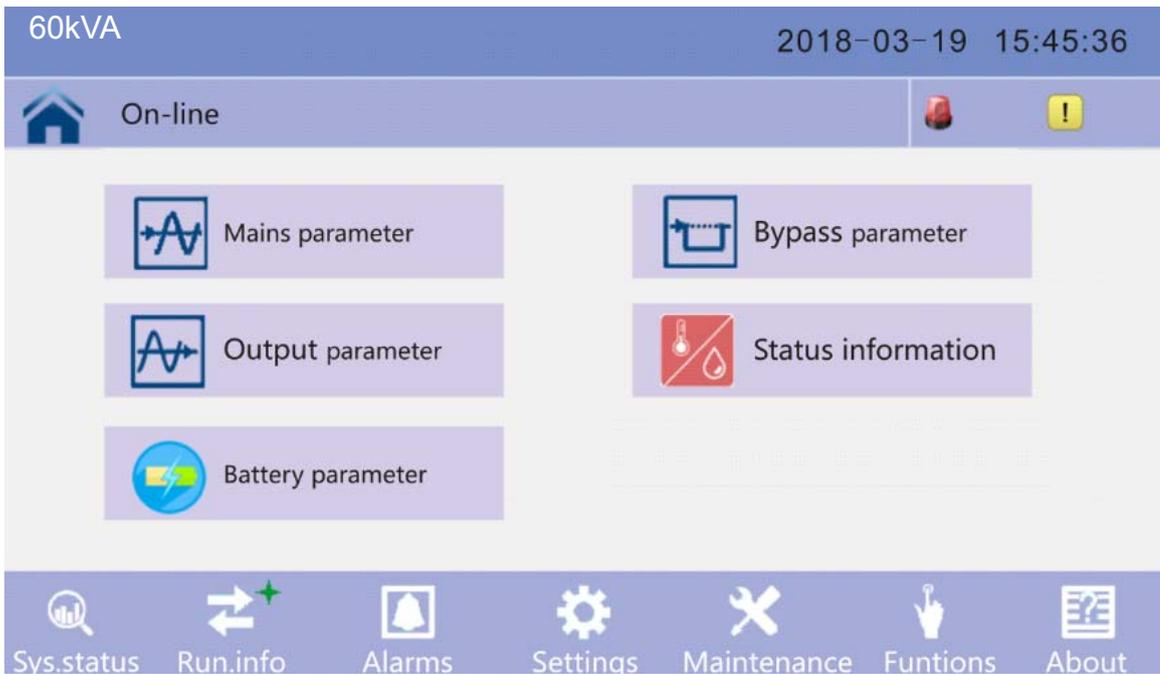


1) Click on the Run time icon to enter the status data window, can see the breaker status, click on the back icon return to last window and click on the home page icon jump to main page.

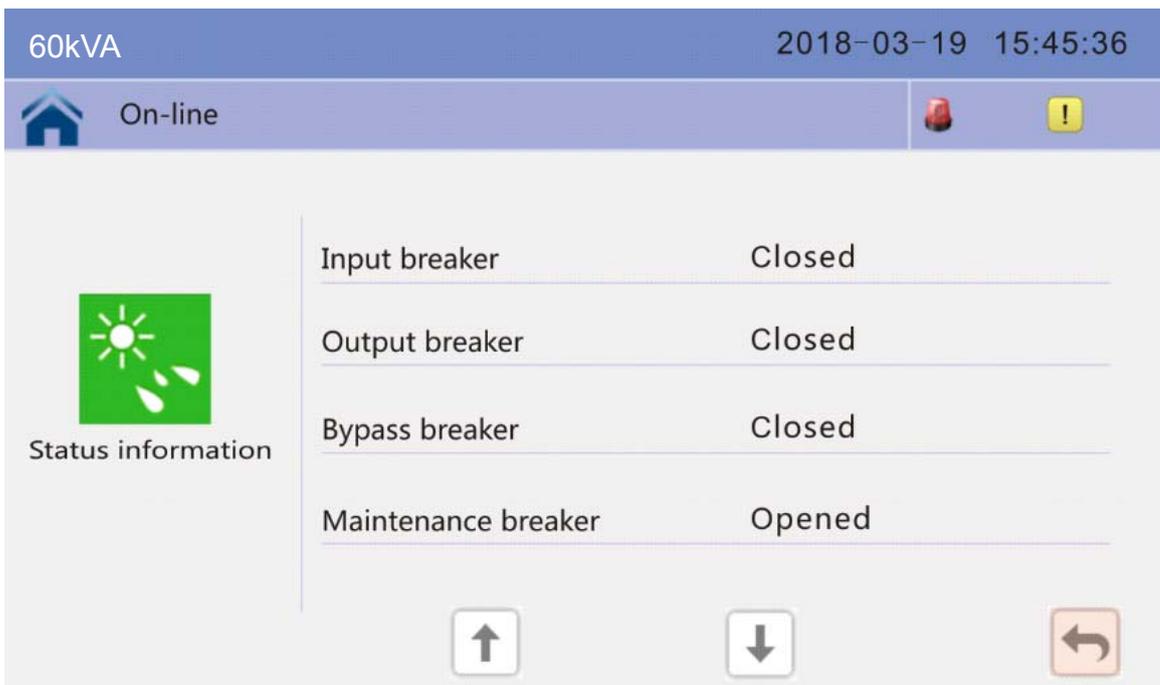

2) Click on the ENV data icon to enter the status data window, can see the temperature data after connected to temperature sensor, click on the back icon return to last window and click on the home page icon jump to main page.



4.3.3 Click on Alarm icon to enter the alarms page.

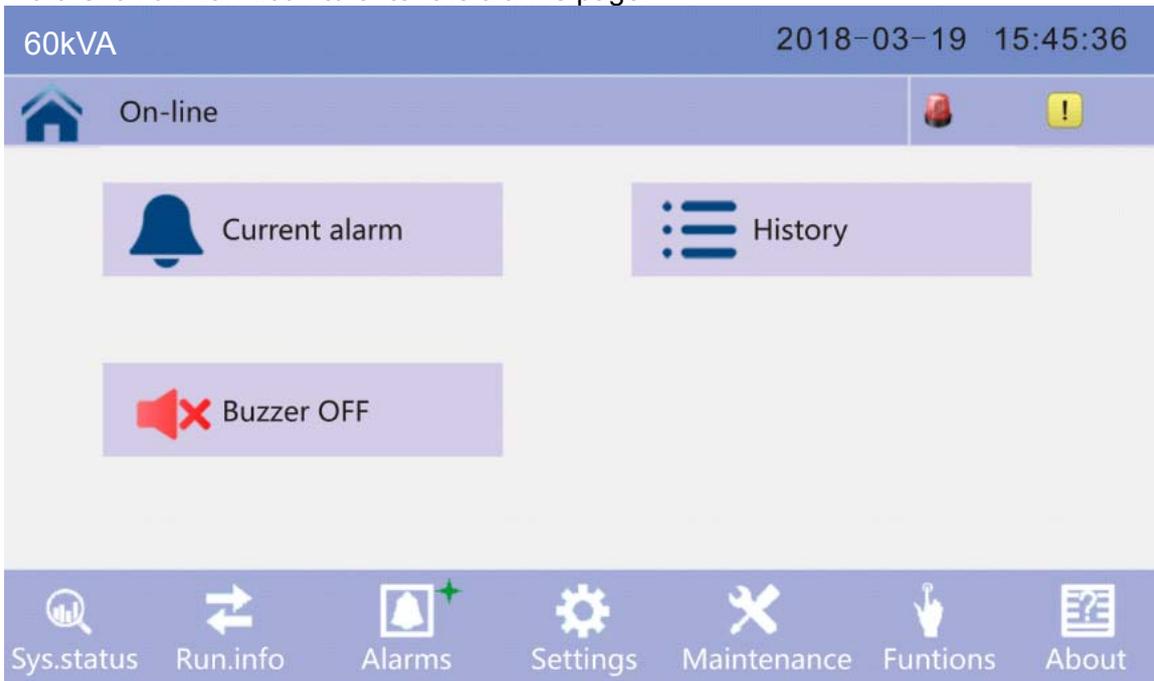

1) Click on the active Alarm icon to enter the module data window, can see the alarm data, click on the back icon return to last window and click on the home page icon jump to main page.

60kVA 2018-03-19 15:45:36

No battery 1

Current alarm

No.	Grad	Information
0001		No battery

2) Click on the history icon to enter the history window, can see the history data, click on the back icon return to last window and click on the home icon jump to main page.


60kVA 2018-03-19 15:45:36

No battery 1


History

No.	Grad	Information	Location	Time
0001		No battery	System	2018-03-19 15:46:36
0002		On-line	System	2018-03-19 15:44:50
0003		Bypass breaker closed	System	2018-03-19 15:44:40
0004		Fan fault	System	2018-03-19 15:44:36
0005		Rectifier fault	System	2018-03-19 15:44:30
0006		Battery boost charging	System	2018-03-19 15:48:36


4.3.4 Click on setting icon to enter setting page, click on the back icon return to last window and click on the home icon jump to main page

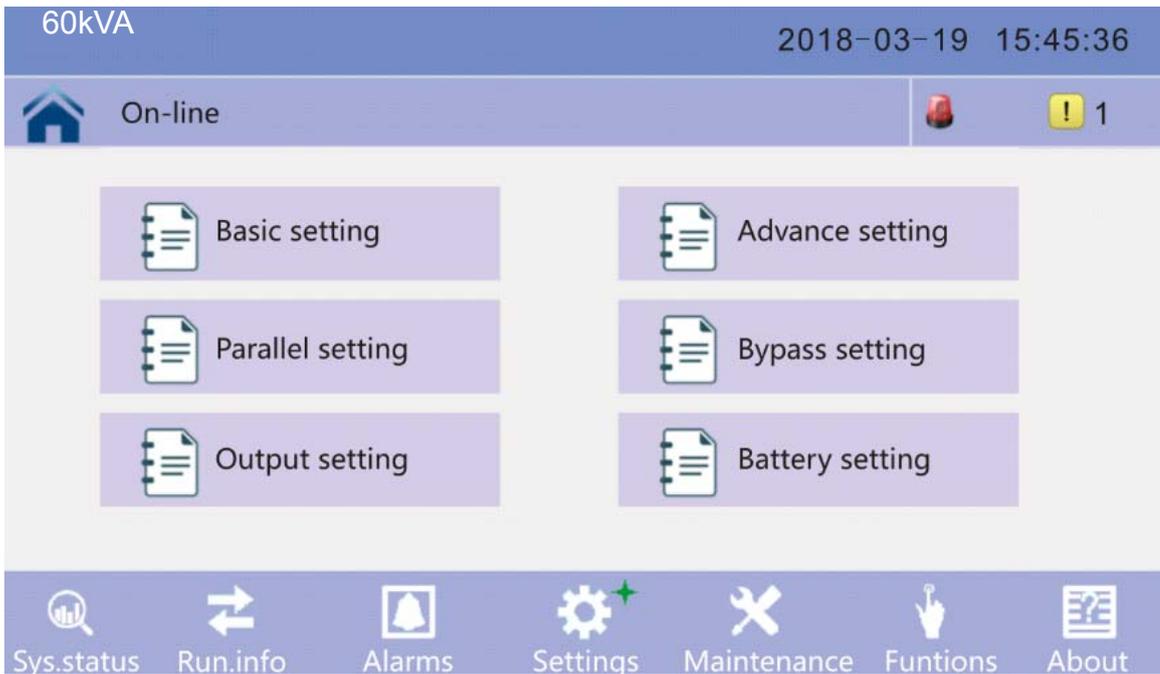

4.3.5 Click on Maintenance icon to enter setting page, click on the back icon return to last window and click on the homepage icon jump to main page

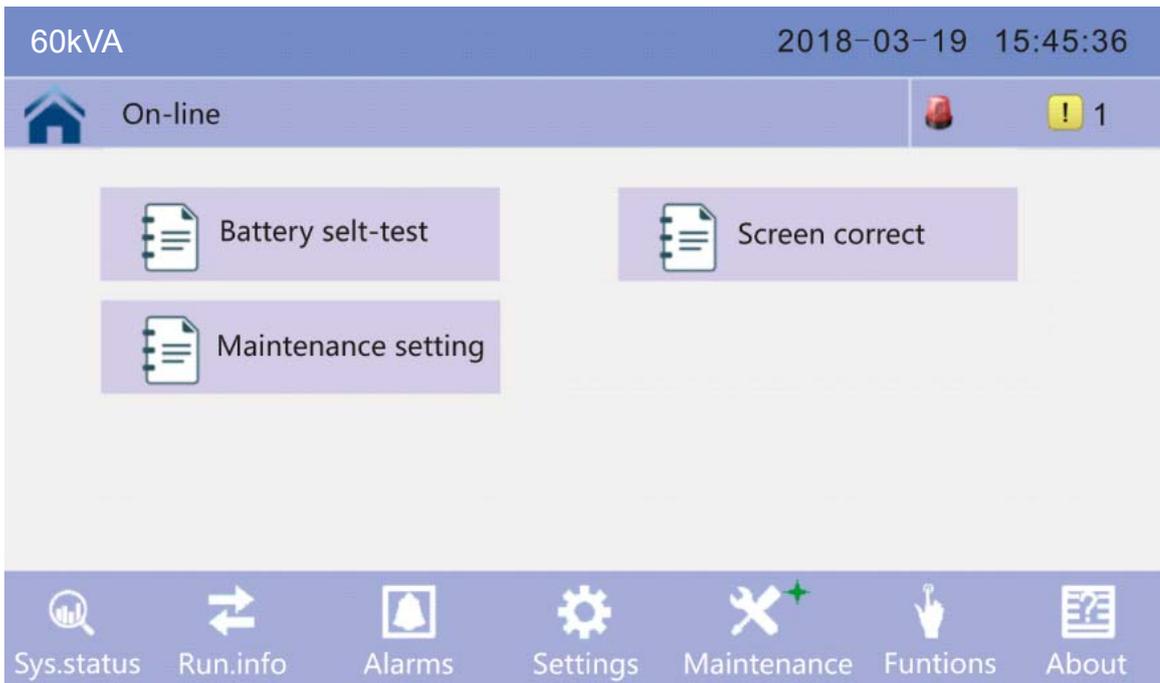

4.3.6 Click on Function icon to enter setting page, click on the back icon return to last window and click on the homepage icon jump to main page

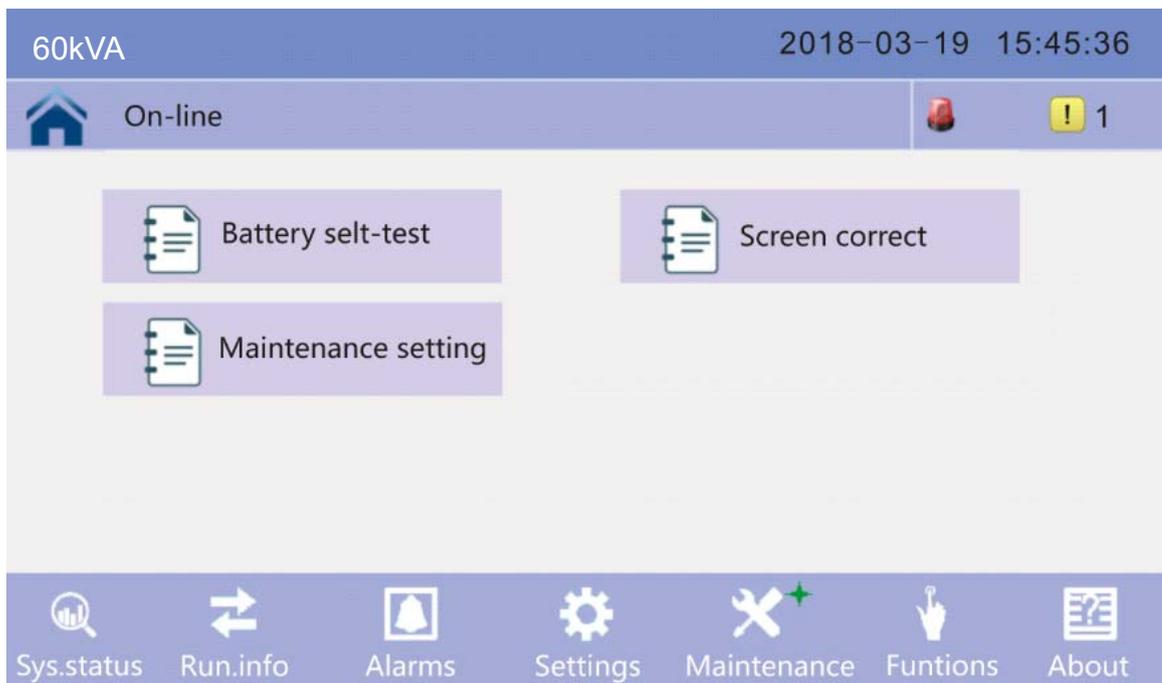

## 4.4 Display Messages/Troubleshooting

This section lists the event and alarm messages that the UPS might display. The messages are listed in alphabetical order. This section is listed with each alarm message to help you troubleshoot problems.

### Display messages

#### Operational Status and Mode(s)

No.	Information stand for	LED			
		Fault	Bypass	Battery	Inverter
1	Initialized	EXTINGUISH	EXTINGUISH	EXTINGUISH	EXTINGUISH
2	Standby Mode	EXTINGUISH	EXTINGUISH	X	EXTINGUISH
3	No Output	EXTINGUISH	EXTINGUISH	X	EXTINGUISH
4	Bypass Mode	EXTINGUISH	LIGHT	X	EXTINGUISH
5	Utility Mode	EXTINGUISH	EXTINGUISH	X	LIGHT
6	Battery Mode	EXTINGUISH	EXTINGUISH	LIGHT	EXTINGUISH
7	Battery Self-diagnostics	EXTINGUISH	EXTINGUISH	LIGHT	EXTINGUISH
8	Inverter is starting up	EXTINGUISH	X	X	EXTINGUISH
9	ECO Mode	EXTINGUISH	X	X	X
10	EPO Mode	LIGHT	EXTINGUISH	X	EXTINGUISH
11	Maintenance Bypass Mode	EXTINGUISH	EXTINGUISH	EXTINGUISH	EXTINGUISH
12	Fault Mode	LIGHT	X	X	X

**CAUTION:** "X" means it is determined by other conditions

### Fault Information

No	Fault Cord	UPS Alarm Warning	Buzzer	LED
1	002	REC Over Temperature	Twice per second	Fault LED lit

No	Fault Cord	UPS Alarm Warning	Buzzer	LED
2	003	REC par.cable Fault	Twice per second	Fault LED lit
3	004	REC Over Current	Beep continuously	Fault LED lit
4	005	REC Power Fault	Beep continuously	Fault LED lit
5	007	Input SCR Fault	Beep continuously	Fault LED lit
6	00A	Battery SCR Fault	Beep continuously	Fault LED lit
7	00C	Charge SCR Fault	Beep continuously	Fault LED lit
8	00E	Fan Fault	Beep continuously	Fault LED lit
9	011	Fan Power fault	Beep continuously	Fault LED lit
10	012	Charger Over Temp.	Beep continuously	Fault LED lit
11	013	Soft Start Failed	Beep continuously	Fault LED lit
12	014	BAT Charger Fault	Beep continuously	Fault LED lit
13	016	REC Comm. Fault	Once per 2 seconds	Fault LEDblinking
14	019	REC Initializes Fault	Beep continuously	Fault LED lit
15	01D	Unit insert fault	Once per 2 seconds	Fault LED lit
16	063		Once per 2 seconds	Fault LED lit
17	01E	Rectifier Fault	Beep continuously	Fault LED lit
18	041	Inverter Fault	Beep continuously	Fault LED lit
19	044	INV IGBT SHORT	Beep continuously	Fault LED lit
20	047	Inverter relay Short	Beep continuously	Fault LED lit
21	04A	Inverter relay Broken	Beep continuously	Fault LED lit
22	04D	INV par.cable Fault	Twice per second	Fault LED lit
23	051	Output Short Circuit	Once per second	Fault LEDblinking
24	054	INV Comm. Fault	Once per 2 seconds	Fault LEDblinking
25	057	INV Initializes Fault	Beep continuously	Fault LED lit
26	05A	INV self-test Fault	Beep continuously	Fault LED lit
27	05E	DC Component Fault	Once per 2 seconds	Fault LED lit
28	061	DC bus abnormal	Beep continuously	Fault LED lit
29	064	INV DSP Power Fault	Beep continuously	Fault LED lit
30	067	INV Over Temperature	Twice per second	Fault LED lit
31	068	Load Sharing Fault	Twice per second	Fault LED lit
32	06A	Cabinet mode Fault	Beep continuously	Fault LED lit
33	06B	Fuse Broken	Beep continuously	Fault LED lit
34	081	Par.cable Fault	Twice per second	Fault LED lit
35	086	ECU Insert Fault	Once per 2 seconds	Fault LED lit
36	088	ECU Power Fault	Beep continuously	Fault LED lit
37	08B	ECU Comm. Fault	Beep continuously	Fault LED lit
38	08D	ECU Initializes Fault	Once per 2 seconds	Fault LEDblinking
39	091	Bypass SCR Broken	Beep continuously	Fault LED lit
40	0C2		Beep continuously	Fault LED lit
41	094	Bypass SCR short	Beep continuously	Fault LED lit
42	0C5		Beep continuously	Fault LED lit
43	097	BPS Over Temperature	Beep continuously	Fault LED lit
44	0CF		Beep continuously	Fault LED lit
45	09A	Output CT Reverse	Beep continuously	Fault LED lit
46	09D	Bypass Feedback Fault	Beep continuously	Fault LED lit

### AlarmInformation

No	Alarm Cord	UPS Alarm Warning	Buzzer	LED
1	103	Battery Over Voltage	Once per second	BATTERYLED blinking
2	104	BAT Low Pre-warning	Once per second	BATTERYLED blinking
3	105	Battery Reverse	Twice per second	BATTERYLED blinking
4	106	Battery EOD	Once per second	BATTERYLED blinking
5	107	Battery Voltage low	Once per second	BATTERYLED blinking
6	108	No Battery	Once per second	BATTERYLED blinking

No	Alarm Cord	UPS Alarm Warning	Buzzer	LED
7	109	Input Phase Reverse	Once per second	INVERTERLEDblinking
8	10A	Input N-Line lost	Twice per second	INVERTERLEDblinking
9	10B	Mains Freq. Abnormal	Once per 2 seconds	INVERTERLEDblinking
10	10C	Mains Volt. Abnormal	Once per 2 seconds	INVERTERLEDblinking
11	10D	REC Comm. Error	Once per 2 seconds	INVERTERLEDblinking
12	10E	Mains input lost	Once per 2 seconds	
13	10F	Set Data Err.	Once per 2 seconds	FAULTLEDblinking
14	121	INV Par.cable abnormal	Once per 2 seconds	FAULTLEDblinking
15	125	INV Overload	Once per 2 seconds	INVERTERLEDblinking
16	126	INV not synchronized	Beep continuously	INVERTERLEDblinking
17	12A	INV Set Data Err	Once per 2 seconds	FAULTLEDblinking
18	129	INV Comm. Error	Once per 2 seconds	FAULTLEDblinking
19	141	Bypass Switch to Num	Once per 2 seconds	BYPASSLED blinking
20	142	Unit quantity mismatch	Once per 2 seconds	FAULTLEDblinking
21	143	Parallel Overload	Once per 2 seconds	INVERTERLEDblinking
22	144	Bypass Overload	Once per 2 seconds	BYPASSLED blinking
23	145	Maint. Switch Misuse	Once per 2 seconds	FAULTLEDblinking
24	146	ECU Comm. Error	Once per 2 seconds	FAULTLEDblinking
25	147	Par.cable abnormal	Once per 2 seconds	FAULTLEDblinking
26	14B	ECU Par.cable abnormal	Once per 2 seconds	FAULTLEDblinking
27	14C	ECU Abnormal	Once per 2 seconds	FAULTLEDblinking
28	14E	BPS Phase Reversed	Once per second	BYPASSLED blinking
29	162		Once per second	BYPASSLED blinking
30	14F	BPS Unable To Trace	Once per 2 seconds	BYPASSLED blinking
31	163		Once per 2 seconds	BYPASSLED blinking
32	150	BPS Not Available	Once per second	BYPASSLED blinking
33	164		Once per second	BYPASSLED blinking
34	151	Ecu Set Data Err	Once per 2 seconds	FAULTLEDblinking

## 4.5 Options


**SNMP card:** internal SNMP / external SNMP optional

- ◆ Loosen the 2 torque screws (on each side of the card).
- ◆ Carefully pull out the card. Reverse the procedure for re-installation

The slot called SNMP supports the MEGAtec protocol. We advise that NetAgent II-3 port is also a tool to remotely monitor and manage any UPS system

NetAgent II-3Ports supports the Modem Dial-in (PPP) function to enable the remote control via the internet when the network is unavailable.

In addition to the features of a standard NetAgent Mini, NetAgent II has the option to add NetFeeler Lite to detect temperature, humidity, smoke and security sensors. Thus, making NetAgent II a versatile management tool. NetAgent II also supports multiple languages and is setup for web-based auto language detection.

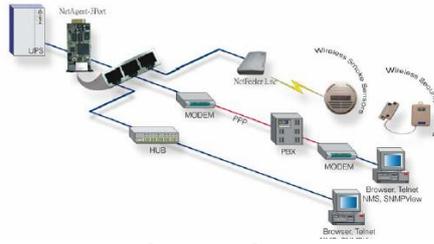

Typical topology of the UPS Network Management

## Relay card

The card is used for providing the interface for UPS peripheral monitoring. The contact signals can reflect UPS running status. The card is connected to peripheral monitoring devices via DB9 female to facilitate the effective monitoring of the real-time status of UPS and timely feedback the status to monitor when abnormal situation occurs (such as UJPS failure, mains interruption, UPS bypass and ect.). It is installed in the intelligent slot of the UPS.

The relay card includes 6 output ports and one input port. Please refer to the following table for detail.

Pin-out <sup>Ⓢ</sup>	Function description <sup>Ⓢ</sup>	Input/Output <sup>Ⓢ</sup>
1 <sup>Ⓢ</sup>	UPS Failure <sup>Ⓢ</sup>	Output <sup>Ⓢ</sup>
2 <sup>Ⓢ</sup>	Summary Alarm <sup>Ⓢ</sup>	Output <sup>Ⓢ</sup>
3 <sup>Ⓢ</sup>	GND <sup>Ⓢ</sup>	<sup>Ⓢ</sup>
4 <sup>Ⓢ</sup>	Remote Shutdown <sup>Ⓢ</sup>	Input <sup>Ⓢ</sup>
5 <sup>Ⓢ</sup>	Common <sup>Ⓢ</sup>	<sup>Ⓢ</sup>
6 <sup>Ⓢ</sup>	Bypass <sup>Ⓢ</sup>	Output <sup>Ⓢ</sup>
7 <sup>Ⓢ</sup>	Battery Low <sup>Ⓢ</sup>	Output <sup>Ⓢ</sup>
8 <sup>Ⓢ</sup>	UPS ON <sup>Ⓢ</sup>	Output <sup>Ⓢ</sup>
9 <sup>Ⓢ</sup>	Utility Failure <sup>Ⓢ</sup>	Output <sup>Ⓢ</sup>

## Appendix 1 Specifications

MODEL	50kVA	60kVA	100kVA	120kVA	150kVA	160kVA	180kVA	200kVA
Capacity (VA/Watts)	50k 50k	60k 60k	100k 100k	120k 120k	150k 150k	160k 160k	180k 180k	200k 200k
<b>INPUT</b>								
Nominal voltage	380/400/415Vac, (3Ph+N+PE)							
Operating voltage range	138~485Vac							
Operating frequency range	40Hz-70Hz							
Power factor	≥0.99							
Harmonic distortion (THDi)	≤3% (100%non-linear load )							
Bypass voltage range	220Vac Max.voltage: +25%(optional +10%,+15%,+20% ) 230Vac Max.voltage: +20%(optional +10%,+15% ) 240Vac Max.voltage: +15%(optional +10% ) Min. voltage: -45% (optional -20%,-30%) Frequency synchronize tracing range: ±10%							
Generator input	Support							

<b>OUTPUT</b>						
Output voltage	380/400/415Vac (3Ph+N+PE)					
Voltage regulation	±1%					
Power factor	1.0					
Output frequency	1.Line Mode: synchronize with input; when input frequency >±10% (±1%/±2%/±4%/±5% optional) 2.Battery Mode:50/60*(1±0.02%)Hz					
Crest factor	3:1					
Harmonic distortion (THD)	≤2% with linear load ≤4% with non linear load					
Efficiency	95.5%					
<b>BATTERY</b>						
Battery voltage	Optional Voltage: ±180V/±192V/±204V/±216V/±228V/±240/±252/±264/±276/±288/±300Vdc(30/32/34/ 36/38/40/42/44/46/48/50pcs optional) 360Vdc~600Vdc (30~50 pcs, 36 pcs define, 36 and 50 pcs no power derating; 32~34 pcs output power factor 0.9;30 pcs output power factor 0.8;)					
Charge Current(A) (charge current can be set according to battery capacity installed)	Max.current 20A		Max.current 40A		Max.current 60A	
<b>SYSTEM FEATURES</b>						
Transfer time	Utility to Battery : 0ms; Utility to bypass: 0ms					
Overload	Load≤110%: last 60min,≤125%: last 10min,≤150%: last 1min					
Alarm	overload, utility abnormal, UPS fault, battery low, etc.					
Backfeed	Support					
Protection	short circuit, overload, over temperature, battery low, fan fault alarm.					
Communication	USB,RS232, RS485, Parallel port, REPO port, LBS port, Backfeed port, Intelligent slot, SNMP card (optional), Relay card (optional)					
<b>ENVIRONMENTAL</b>						
Operating temperature	0℃~40℃					
Storage temperature	-25℃~55℃(no battery)					
Humidity range	0~95% (non condensing)					
Altitude	< 1500m.When>1500m,lower the rated power for use					
Noise level	<58dB	<60dB	<63dB	<65dB	<66dB	<68dB
<b>PHYSICAL</b>						
Dimension D×W×H (mm)	828x250x868		850x442x1100		850x442x1200	
Net weight (kg)	80	83	147	152	190	200 230
<b>STANDARDS</b>						
Safety	IEC/EN62040-1,IEC/EN60950-1					
EMC	IEC/EN62040-3,IEC61000-4-2,IEC61000-4-3,IEC61000-4-4,IEC61000-4-5,IEC61000-4-6,IEC61000-4-8					

## Appendix 2 Problems and Solution

In case the UPS cannot work normally, it might be wrong in installation, wiring or operation. Please check these aspects first. If all these aspects are checked without any problem, please consult with local agent right away and provide below information.

( 1 ) Product model name and serial number.


( 2 ) Try to describe the fault with more details, such as LCD display info, LED lights status, etc.

Read the user manual carefully, it can help a lot for using this UPS in the right way. Some FAQ (frequently asked questions) may help you to troubleshoot your problem easily.

No.	Problem	Possible reason	Solution
1	Utility is connected but the UPS cannot be powered ON.	Input power supply is not connected; Input voltage low; The input switch of the UPS is not switched on.	Measure if the UPS input voltage/frequency is within the window. Check if UPS input is switched on
2	Utility normal but Utility LED does not light on, and the UPS operates at battery mode	The input breakers of the UPS are not switched on; input cable is not well connected	Switch on the input breaker; Make sure the input cable is well connected.
3	The UPS does not indicate any failure, but output does not have voltage	Output cable does not well connected; Output breaker does not switch on	Make sure the output cable is well connected; Switch on the output breaker.
4	Utility LED is flashing	Utility voltage exceeds UPS input range.	If the UPS operates at battery mode, please pay attention to the remaining backup time needed for your system.
5	Battery LED is flashing but no charge voltage and current	Battery breaker does not switch on, or batteries are damaged, or battery is reversely connected. Battery number and capacity are not set correctly.	Switch on the battery breaker. If batteries are damaged, need to replace whole group batteries, Connect the battery cables correctly; Go to LCD setting of the battery number and capacity, set the correct data.
6	Buzzer beeps every 0.5 seconds and LCD display "output overload"	Overload	Remove some load
7	The UPS only works on bypass mode	The UPS is set to ECO mode, or the transfer times to bypass mode are limited.	Set the UPS working mode to UPS type(non-parallel) or to reset the times of transferring to bypass or re-start the UPS
8	Cannot Black start	Battery switch is not properly closed: Battery fuse is not open: Or Battery low: Battery quantity set wrong; Power breaker in the rear panel not switch ON.	Close the battery switch: Change the fuse: Recharge the battery: Power ON the UPS with AC to set the battery quantity & quantity; Switch on the power breaker.

## Appendix 3 USB communication port definition

Definition of port:

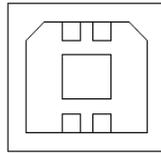

Connection between PC USB port and UPS USB port.

PC USB port	UPS USB port	Description
Pin 1	Pin 1	PC : +5V
Pin 2	Pin 2	PC : DPLUS signal
Pin 3	Pin 3	PC : DMINUS signal
Pin 4	Pin 4	Signal ground

Available function of USB

- ◆ Monitor UPS power status.
- ◆ Monitor UPS alarm info.
- ◆ Monitor UPS running parameters.
- ◆ Timing off/on setting.

Communication data format

Baud rate ----- 9600bps

Byte length ----- 8bit

End bit ----- 1bit

Parity check -----none




### CAUTION!

**USB and RS232 interface cannot be used at the same time, you can only use one of them at one time.**

## Appendix 4 RS232 communication port definition

Definition of Male port:

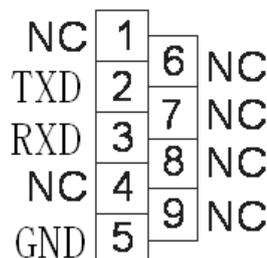

Connection between PC RS232 port and UPS RS232 port

PC RS232 port	UPS RS232 port	
Pin 2	Pin 2	UPS send,PC receive
Pin 3	Pin 3	PC send,UPS receive
Pin 5	Pin 5	ground

Available function of RS232

- ◆ Monitor UPS power status.
- ◆ Monitor UPS alarm info.
- ◆ Monitor UPS running parameters.
- ◆ Timing off/on setting.

RS-232 communication data format

Baud rate ----- 9600bps

Byte length ----- 8bit

End bit ----- 1bit

Parity check -----none




**CAUTION!**

**USB and RS232 interface cannot be used at the same time, you can only use one of them at one time.**

**Appendix 5 RS485 communication port definition**

Definition of port:

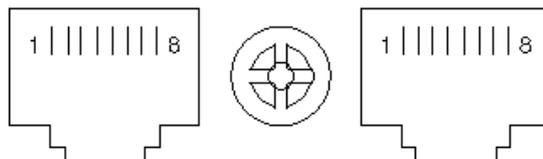

Connection between the Device's RS485 port and UPS RS485 port.

device(RJ45)	UPS(RJ45)	Description
Pin 1/5	Pin 1/5	485+“A”
Pin 2/4	Pin 2/4	485 - “B”
Pin7	Pin7	+12Vdc
Pin8	Pin8	GND

Available function of RS485

- ◆ Monitor UPS power status.
- ◆ Monitor UPS alarm info.
- ◆ Monitor UPS running parameters.
- ◆ Timing off/on setting.
- ◆ Battery environment temperature monitoring.
- ◆ Charging voltage modulation depending on batteries temperature

Communication data format

Baud rate ----- 9600bps

Byte length ----- 8bit

End bit ----- 1bit

Parity check -----none




**CAUTION!**

**RS485 port pin7 is 12Vdc!**

## Appendix 6 Optional port definition

Definition of Male port:

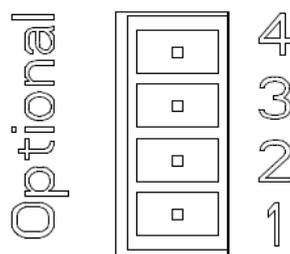

Instruction:

UPS	Instruction
Pin1	Normally NC
Pin2	Normally NO
Pin3	/
Pin4	Common

Function 1 description (Optional):

- ◆ Drive the bypass breaker when feedback alarm.


Function 2 description (Optional):

- ◆ Drive the battery breaker when battery voltage low.

## Appendix 7 REPO instruction

Definition of port:

Connection diagram:

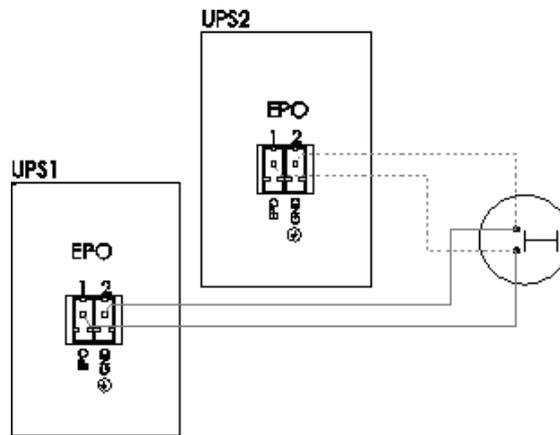

Connection between the button and UPS REPO port.

Button	UPS REPO	Description
Pin 1	Pin 1	EPO
Pin 2	Pin 2	GND

- ◆ A remote emergency stop switch (Photocoupler contact signal and “normally open” - not provided) can be installed in a remote location and connection through simple wires to the REPO connector.
- ◆ The remote switch can be connected to several UPS in a parallel architecture allowing the user to stops all units at once.